

EN

Original Instructions
Version 2



3 TONNE **TROLLEY JACK**

27635



**UK
CA** **CE**

1. Preface

These are the original product instructions. This document is part of the product; retain it for the life of the product, passing it on to subsequent holders. Read this manual in full before attempting to assemble, operate, or maintain this product.

This Draper Tools manual describes the purpose of the product and contains all the necessary information to ensure its correct and safe use. Following all the instructions and guidance in this manual will ensure the safety of both the product and the operator and increase the lifespan of the product.

All photographs and drawings within this manual are supplied by Draper Tools to help illustrate correct operation of the product.

Every effort has been made to ensure the information contained in this manual is accurate. However, Draper Tools reserves the right to amend this document without prior warning. Always use the latest version of the product manual.

1.1 Product Reference

User Manual for: 3 Tonne Trolley Jack

Stock No: 27635

Part No: TJ3LD

1.2 Revisions

Version 1: May 2014
First release

Version 2: May 2024
Update to format

As our manuals are continually updated, always ensure that the latest version is used.

Download the latest version from:
drapertools.com/manuals

1.3 Understanding the Safety Content



WARNING! – Situations or actions that may result in personal injury or death.



CAUTION! – Situations or actions that may result in damage to the product or surroundings.

Important: – Information or instructions of particular importance.

1.4 Copyright © Notice

Copyright © Draper Tools Limited.

Permission is granted to reproduce this manual for personal and educational use **ONLY**. Commercial copying, redistribution, hiring, or lending is strictly prohibited.

No part of this manual may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases, this copyright notice must remain intact.

1. Preface	2	6. Identification and Unpacking	7
1.1 Product Reference	2	6.1 Product Overview	7
1.2 Revisions	2	6.2 Packaging	7
1.3 Understanding the Safety Content	2	7. Operating Instructions	8
1.4 Copyright © Notice	2	7.1 Preparing the Jack	8
2. Contents	3	7.2 Raising a Load	8
3. Product Introduction	3	7.3 Lowering a Load	8
3.1 Intended Use	3	8. Maintenance and Troubleshooting	9
3.2 Specification	3	8.1 General Maintenance	9
4. Explanation of Symbols	4	8.2 Checking and Replacing the Oil	9
5. Health and Safety Information	5	8.3 Troubleshooting	10
5.1 General Health and Safety Precautions	5	9. Disposal	10
5.2 Preparing the Vehicle to be Lifted	5	10. Warranty	11
5.3 Correct Use of the Jack	6		

3. Product Introduction

3.1 Intended Use

This trolley jack is designed for the lifting of vehicles of up to the stated maximum weight limit as part of domestic and infrequent light-duty use.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

This product complies with the requirements defined by EN 1494.

Read this manual in full before assembling, operating or maintaining the product, and retain it for later use.

3.2 Specification

Stock No.	27635
Part No.	TJ3LD
Capacity	3,000kg
Max. lifting range	140–432mm
Saddle diameter	67mm
Handle length	617mm
Chassis length	635mm
Net weight	27.4kg
Overall dimensions	630mm(L) × 255 (W) × 55mm(H)

4. Explanation of Symbols



Read the instruction manual



Warning!



Mandatory action required



Minimum height



Do not abandon in the environment



Use only on level surfaces



Apply the handbrake and put the vehicle in gear



Chock all grounded wheels



Support raised vehicles with axle stands



Do not work under vehicles when supported only by a jack



European Safety requirements for jacks/
lifting equipment



European conformity





UK Conformity Assessed

Important: Read all Health and Safety instructions before attempting to operate, maintain or repair this product. Failure to follow these instructions may result in injury or damage to the user, the product or the vehicle to be lifted. Draper Tools accepts no responsibility for improper use of this jack.

5.1 General Health and Safety Precautions

- Only authorised personnel who have carefully read and understood this manual should operate this product.
- Always wear adequate protective footwear when using the jack.
- Always ensure that the working area is well illuminated and free from obstructions.
- Keep bystanders at a safe distance during operation.
- Allow a minimum distance of 0.5m between the vehicle and surrounding objects to allow the vehicle to tip when lifted.
- The wheels of this product **DO NOT** lock.
 - Ensure that the jack will not roll once positioned for use.
- Care must be taken when handling and lifting.
 - Dropping the jack may result in damage to the product or personal injury.
- **DO NOT** modify this product in any way.
- Stay alert to external interference that may cause the raised load to rock during preparation and operation.
- Ensure that the load to be lifted does not exceed the maximum capacity specified for the jack.
- When not in use, lower the lifting arm, put the handle shaft into an upright position and twist it clockwise until strong resistance is felt.
 - This prevents the handle shaft from creating a trip hazard and holds it in the upright position.
 - Alternatively, lower the lifting arm, remove the handle shaft and lay it flat on the floor.

5.2 Preparing the Vehicle to be Lifted


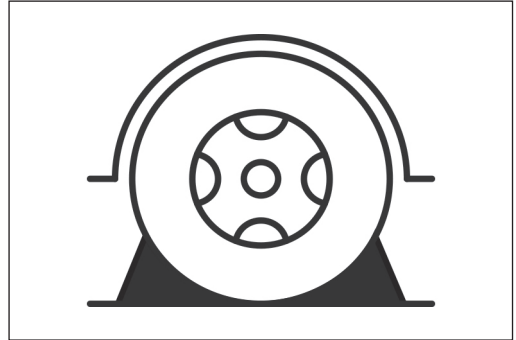
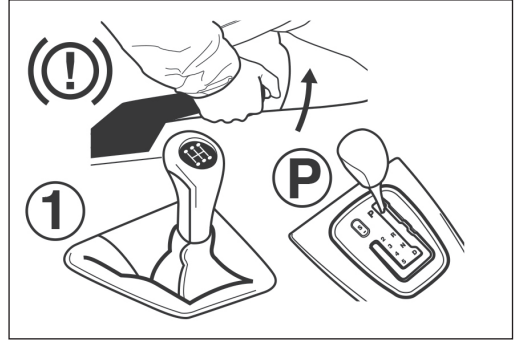


WARNING! DO NOT lift the vehicle if it may result in the spillage of dangerous substances, including fuel or battery acid.

- Ensure that there is no one inside the vehicle.
- Switch off the engine and apply the handbrake.
- Put the vehicle into gear (for manual transmission) or "Park" (for automatic transmission).
- Take any necessary precautions to prevent the vehicle from sliding.
 - Grounded wheels should be securely blocked with wheel chocks.

5. Health and Safety Information

5.3 Correct Use of the Jack

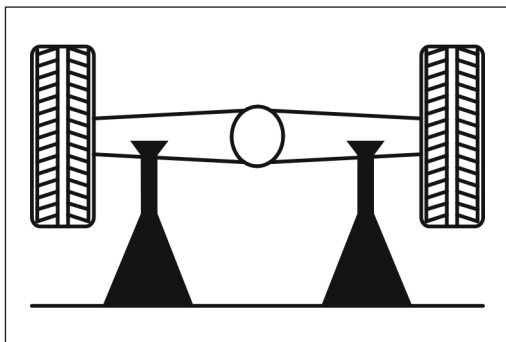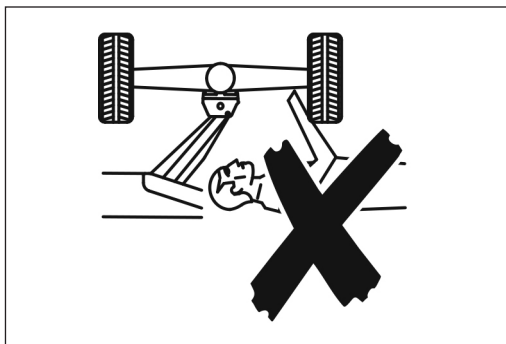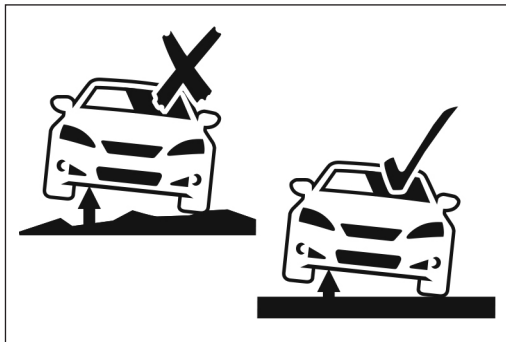

Important: The jack is a lifting device **ONLY** and should never be used to move the vehicle. Always use in conjunction with axle stands when working under a vehicle. The vehicle to be lifted should never exceed the rated capacity of the jack.

- **ALWAYS** bleed the jack piston before use.

- **ONLY** operate the jack on solid, level and horizontal surfaces.
 - A concrete surface is recommended, where possible.
 - All four wheels of the jack should be in contact with the operating surface when in use.




WARNING! Never use the jack on any surface that is slippery or may sink or rock.

- When positioning the jack, **ALWAYS** use the manufacturer's recommended lifting point.
 - These points vary between vehicles; consult the manufacturer's manual or the Haynes workshop manual for the specific vehicle information.
- Ensure that the lifting point is not dirty, greasy or corroded.
- The lifting point must remain centred over the saddle during raising and lowering; off-centred loads may slip and cause injury.
- Position the jack so that no part of the operator is required to be underneath the vehicle at any time during lifting or lowering.
- Keep clear of all movable parts of the jack mechanism when in use.
- To prevent overloading, the jack is fitted with an overload valve set at the factory.

Important: The overload valve should not be adjusted under any circumstances. If the capacity of the jack is exceeded, the valve will prevent the lifting operation.
- Take all precautions to prevent movement of the vehicle during raising and lowering.
 - Be aware that traffic and other external forces may cause the load to rock if used at the roadside.
- Remain alert and observe the load at all times during operation.
 - Should any dangerous conditions occur, including unexpected movement of the vehicle, cease all operation until these conditions have been rectified.
- **NEVER** work under a raised vehicle without using the correct axle supports or other appropriate supporting methods.
- **DO NOT** enter the vehicle or start the engine while it is supported on the jack or axle stand.
- **NEVER** leave the jack unattended when in use.
- **NEVER** detach the handle shaft while the jack is under load.
- **ALWAYS** ensure that there are no persons or obstacles beneath the vehicle before lowering.

6.1 Product Overview

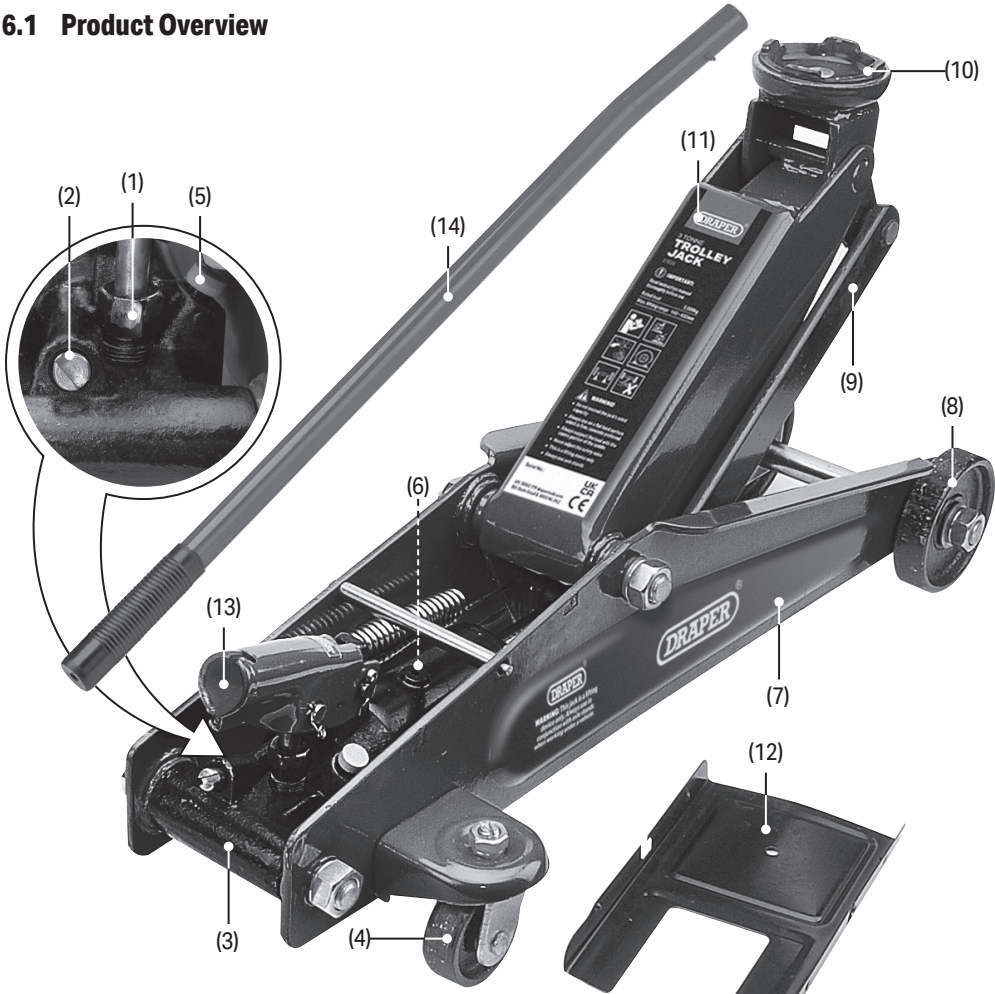

- | | | |
|---------------------|------------------|--------------------|
| (1) Cylinder pump | (6) Reservoir | (11) Lifting arm |
| (2) Release valve | (7) Frame | (12) Cover plate |
| (3) Base | (8) Front wheels | (13) Handle sleeve |
| (4) Castors | (9) Radius link | (14) Jack handle |
| (5) Oil filler plug | (10) Saddle | |

6.2 Packaging

Keep the product packaging for the duration of the warranty period for reference should the product need to be returned for repair.



WARNING! Keep packaging materials out of reach of children. Dispose of packaging correctly and responsibly and in accordance with local regulations.

Please visit drapertools.com for our full range of accessories and consumables.

7. Operating Instructions

Important: Before lifting any load, read and understand all the safety instructions listed in this manual. **ALWAYS** bleed the jack piston before use.

7.1 Preparing the Jack

Prepare the jack correctly before each use:

1. Check the jack for bent, broken, cracked or loose parts and oil leaks; ensure that the wheels (8) rotate freely.



WARNING! Do not use the product if defects are present. If it is suspected that the jack has been subjected to abnormal loads or has suffered any knocks, withdraw it from service until the product has been repaired.

2. Bleed the jack piston
 - a. Fit the handle (14) to the release valve (2) and open by turning the handle (14) anti-clockwise (no more than 2 full turns). Then insert the handle (14) into the handle sleeve (13).

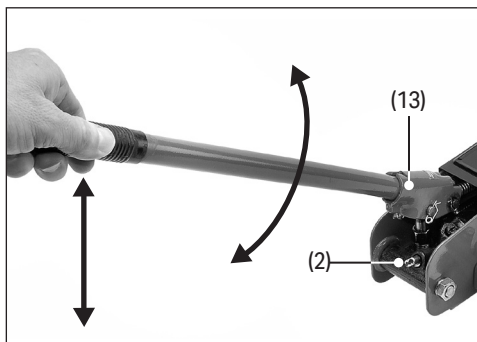


Fig. 1

- b. Pump the handle shaft up and down at least 10 times using the full stroke range to lubricate the piston and expel any accumulated air.
- c. Fit the handle to the release valve and turn clockwise to close.
- d. The jack is now ready to use.

7.2 Raising a Load

1. Lock the release valve (2) but turning the jack handle in a clockwise direction.
2. Position the jack directly beneath the approved vehicle lifting point. See the vehicle manufacturer's manual for the approved lifting points.

3. Twist the handle shaft clockwise until strong resistance is felt.
4. Pump the handle shaft up and down until contact is made with the vehicle and check that the saddle (10) is positioned correctly.

Note: To prevent damage to the jack or the vehicle, never move the jack with the handle on the release valve. Always use axle stands.

5. Pump the handle shaft down and up to lift the vehicle. Use the full stroke range to lift more quickly.
6. Immediately secure the raised vehicle with appropriate axle stands, placing as instructed in the vehicle manufacturer's manual.

7.3 Lowering a Load



WARNING! Always ensure that there are no persons or obstacles beneath the vehicle before lowering.

1. Gently pump the handle shaft to raise the vehicle slightly then remove the axle stand once it is safe to do so.
2. When the axle stand is clear, carefully twist the handle shaft anti-clockwise (two full turns) to gently lower the load.
 - Do not turn the handle shaft more than a half turn at a time during lowering.

Important: Maintenance and repair of the jack must only be performed by qualified personnel with sufficient knowledge of the hydraulics systems used in these devices.

8.1 General Maintenance

- When the jack is not in use, the lifting arm and handle sleeve should be stored in the lowered position.
- Keep the jack clean and regularly lubricate all external moving parts at least every 3 months.

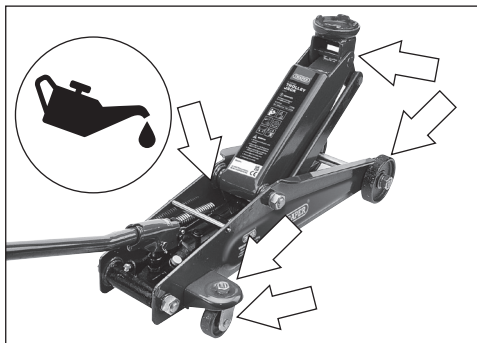


Fig. 2

- Dust and debris may cause components to become clogged or jammed, and the product may not perform at its best.
- Protect the jack and its components from adverse environmental and weather conditions, both during use and when stored. The components may rust if exposed to damp air for prolonged periods.
- Use only spare parts supplied by Draper Tools.
- Before each use, check the jack for signs of damage or disrepair.

8.2 Checking and Replacing the Oil

To extend the working life of the product, keep the oil at an appropriate level and replace it after periods of prolonged intensive use.



CAUTION! Use SAE10 hydraulic oil. Never use brake or engine oil.



WARNING! Oil spillages may cause the operating surface to become slippery. Do not operate the jack on oily surfaces.

To check, drain and refill the oil chamber:

1. Place the jack on a level, horizontal surface.
2. Fully lower the jack and remove the cover plate (12).
3. Remove the oil filler plug (5) and check the oil level.

Important: The correct oil level is 5mm below the filler plug hole.

4. If the oil is dirty or needs replacing:
 - a. Drain any remaining contents into a container.
 - b. Refill the chamber with new oil as required, keeping the oil free of dirt.



CAUTION! Excessive quantities of oil may render the jack inoperable.

5. Replace the oil filler plug and wipe away any excess oil.
6. Return the handle shaft to an upright position.

8. Maintenance and Troubleshooting

8.3 Troubleshooting

Problem	Possible Cause	Remedy
The lifting arm does not raise when the handle shaft is pumped.	The release valve is not fully closed.	Twist the handle shaft clockwise until strong resistance is felt and bleed the piston if necessary.
	The maximum load has been exceeded.	Use an appropriately rated jack or reduce the weight of the load. DO NOT adjust the overload valve.
	The piston system is corroded.	DO NOT use the jack. Contact Draper Tools to discuss repair or replacement options.
The saddle drops once lifted.	The release valve is not fully closed.	Twist the handle shaft clockwise until strong resistance is felt and bleed the piston if necessary.
	The hydraulics mechanism is damaged.	DO NOT use the jack. Contact Draper Tools to discuss repair or replacement options.
The handle shaft cannot be operated or raises the saddle slowly.	The piston system is not appropriately lubricated.	Follow steps in section 7.1.
The handle shaft cannot be twisted.	The attaching bolt has been overtightened.	Slightly loosen the attaching bolt.

9. Disposal

At the end of its working life, or when it can no longer be repaired, dispose of the jack according to local regulations.

Always drain the jack of oil before disposal. Dispose of oil according to local regulations.

Contact your local authority for details of collection schemes in your area.

In all circumstances:

- **DO NOT** dispose of this product with domestic waste
- Before decommissioning, drain and dispose of the oil from the jack in line with local regulations
- **DO NOT** abandon in the environment



Draper Tools products are carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, return the complete tool to your nearest distributor or contact Draper Tools directly. Contact information can be found at the back of this manual.

Proof of purchase must be provided.

If, upon inspection, it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This warranty period covers parts and labour for 12 months from the date of purchase. Where tools have been hired out, the warranty period covers 90 days from the date of purchase.

This warranty does not apply to any consumable parts, batteries or normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper Tools repair agent.

In all cases, to make a claim for faulty workmanship or materials within the standard warranty period, please contact or return the product to the place of purchase. Proof of purchase may be required.

If the place of purchase is no longer trading or if you experience any difficulties with your warranty, please contact Customer Services with the product details and your proof of purchase. Contact details can be found at the back of this manual.

If the tool is not covered by the terms of this warranty, repairs and carriage charges will be quoted and charged accordingly.

This warranty supersedes any other guarantees expressed or implied and variations of its terms are not authorised.

Your Draper Tools guarantee is not effective until you can produce, upon request, a dated receipt or invoice to verify your purchase within the guarantee period.

Please note that this warranty is an additional benefit and does not affect your statutory rights.

Draper Tools Limited

Contact Details

Draper Tools

Draper Tools Limited
Hursley Road
Chandler's Ford
Eastleigh
Hampshire
SO53 1YF
UK

Website: drapertools.com

Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344

Telephone Sales Desk: +44 (0) 23 8049 4333

General Enquiries: +44 (0) 23 8026 6355

General Fax: +44 (0) 23 8026 0784

Delta International

Delta International BV
Oude Graaf 8
6002 NL
Weert
Netherlands

Service / Warranty Repair Agents

For aftersales servicing or warranty repairs, please contact the Draper Tools Product Helpline for details of an agent in your area.