

## DIESEL INJECTOR


## **SEAT CUTTER SET**

30823

- Access and remove the installed injectors.
  Install the appropriate reamer onto the pilot post and tighten the hex screw, then attach the T-handle to the other end. Important: Ensure that the reamer is tightened securely.
- 3. Insert the cutter tool into the recess until contact is made with the injector seat,

- Applying light pressure to the T-handle, turn the cutter clockwise ONLY. Using a few drops of light lubricant while cutting can help to reduce chattering and deliver a flat cut. Important: DO NOT apply excessive pressure as this will over-cut the seat. Remove only enough metal to form a good seat.
- 5. Check that the injector seat is free from debris and repeat if necessary.
- When the seat surface is clean, re-insert the injector.

Store this product in a clean and dry environment, out of reach of children.

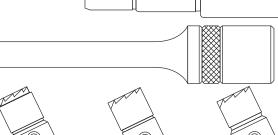

- C. 15 x 19mm universal flat reamer
- D. 17 x 17mm flat reamer for Delphi/Bosch injectors (BMW/PSA/Renault/Ford)
- E. 17 x 19mm flat reamer for Bosch injectors (Mercedes/CRD)



F. 17 x 21mm angled reamer for Fiat/Iveco

A. T-handle

B. Pilot post