

TRACK ROD REMOVAL TOOL

Original Instructions Version 2 – May 2024

42397 - TRRT-4PC INSTRUCTIONS FOR USE

1. Specification

 
Stock No.	42397
Part No.	TRRT-4PC
raitivo.	IRRI-4FG
Track Rod Arm Length:	350mm
Interchangeable	
Head Diameter:	30 - 35mm
	35 - 40mm
	40 - 45mm
Drive Ends	
Hex:	27mm (outer)
Square Drive:	1/2" (inner)

2. Health and Safety Instructions

- Always refer to the vehicle manufacturer's handbook or Haynes manual before dismantling, as some vehicles must be put into service mode. Failure to follow the vehicle manufacturer's service procedure can result in steering loss.
- Draper tools accepts no responsibility for incorrect installation of steering components.

3. Instruction for Use

- Access the track rod and then allow the track rod to pass through the hollow body (A) until the head of the tool (B) meets the steering joint (C).
- Use either a 27mm spanner or ½" square drive to turn the tool anti-clockwise to loosen the steering joint.
- 3. Reverse the process with the new joint.



Contact Details

Draper Tools, Draper Tools Limited, Hursley Road, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF, UK

Website: drapertools.com Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344 Telephone Sales Desk: +44 (0) 23 8049 4333 General Enquiries: +44 (0) 23 8026 6355 **Delta International**, Delta International BV, Oude Graaf 8, 6002 NL, Weert, Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.

© Published by Draper Tools Limited