

# DRAPER®

## INSTRUCTIONS FOR Electronic Safes

Stock No.38212, 38213, 38214, 38216, 38218.  
Part No.SAFE10, SAFE11, SAFE12, SAFE13, SAFE14.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS PRODUCT.



CE

DRAPER®

### GENERAL INFORMATION

These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself. All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product. Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

## 2. CONTENTS

---

### 2.1 CONTENTS

#### Page content Page

|   |  |   |
|---|--|---|
| 1 | TITLE PAGE                                     |   |
|   | 1.1 INTRODUCTION .....                         | 2 |
|   | 1.2 REVISION HISTORY .....                     | 2 |
|   | 1.3 UNDERSTANDING THIS MANUAL .....            | 2 |
|   | 1.4 COPYRIGHT NOTICE .....                     | 2 |
| 2 | CONTENTS                                       |   |
|   | 2.1 CONTENTS.....                              | 3 |
| 3 | GUARANTEE                                      |   |
|   | 3.1 GUARANTEE.....                             | 4 |
| 4 | INTRODUCTION                                   |   |
|   | 4.1 SPECIFICATION.....                         | 4 |
| 5 | TECHNICAL DESCRIPTION                          |   |
|   | 5.1 IDENTIFICATION.....                        | 4 |
| 6 | OPERATING THE SAFE                             |   |
|   | 6.1 OPENING YOUR SAFE FOR THE FIRST TIME ..... | 4 |
|   | 6.2 INSERTING THE BATTERIES.....               | 4 |
|   | 6.3 OPENING DOOR.....                          | 5 |
|   | 6.4 CLOSING DOOR.....                          | 5 |
|   | 6.5 SETTING USER CODE.....                     | 5 |
|   | 6.6 SETTING THE MASTER CODE.....               | 5 |
|   | 6.7 OPENING THE SAFE IN EMERGENCY .....        | 5 |
| 7 | SECURE SAFE ON WALL                            |   |
|   | 7.1 SECURE SAFE TO WALL .....                  | 5 |

# 1. TITLE PAGE

---

## **1.1 INTRODUCTION:**

USER MANUAL FOR:

ELECTRONIC SAFES

Stock no. 38212, 38213, 38214, 38216, 38218.

Part no. SAFE10, SAFE11, SAFE12, SAFE13, SAFE14.

## **1.2 REVISIONS:**

Date first published January 2014

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

As our user manuals are continually updated, users should make sure that they use the very latest version.

Downloads are available from: <http://www.drapertools.com/b2c/b2cmanuals.pgm>

DRAPER TOOLS LIMITED

HURSLEY ROAD

CHANDLER'S FORD

EASTLEIGH

HAMPSHIRE

SO53 1YF

UK

WEBSITE: [www.drapertools.com](http://www.drapertools.com)

PRODUCT HELPLINE: +44 (0) 23 8049 4344

GENERAL FAX: +44 (0) 23 8026 0784

## **1.3 UNDERSTANDING THIS MANUALS SAFETY CONTENT:**

**WARNING!** Information that draws attention to the risk of injury or death.

**CAUTION!** Information that draws attention to the risk of damage to the product or surroundings.

## **1.4 COPYRIGHT © NOTICE:**

Copyright © Draper Tools Limited.

Permission is granted to reproduce this publication for personal & educational use only. Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases this copyright notice must remain intact.

---

## 3. GUARANTEE

### 3.1 GUARANTEE

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship. Should the tool develop a fault, please return the complete tool to your nearest distributor or contact Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF, England. Telephone Sales Desk: (023) 8049 4333 or Product Helpline (023) 8049 4344.

A proof of purchase must be provided with the tool.

If upon inspection it is found that a fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. The guarantee period covering parts/labour is 12 months from the date of purchase. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agents.

Note: If the tool is found not to be within the Terms of Warranty, repair and carriage charges will be quoted and made accordingly.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your Draper guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the guarantee period. Please note that this guarantee is an additional benefit and does not affect your statutory rights.

Draper Tools Limited.

Note: This tool is intended for domestic use only.

## 4. INTRODUCTION

 
### 4.1 SPECIFICATION

|                           |               |       |               |       |               |
|---------------------------|---------------|-------|---------------|-------|---------------|
| Stock no. ....            | 38212         | ..... | 38213         | ..... | 38214         |
| Part no. ....             | SAFE10        | ..... | SAFE11        | ..... | SAFE12        |
| Battery type .....        | 4 x AA        | ..... | 4 x AA        | ..... | 4 x AA        |
| Internal Dimensions ..... | 245x345x190mm | ..... | 245x345x190mm | ..... | 195x305x140mm |
| Weight .....              | 10.5kg        | ..... | 8.5kg         | ..... | 6.5kg         |

|                           |               |       |               |       |  |
|---------------------------|---------------|-------|---------------|-------|--|
| Stock no. ....            | 38216         | ..... | 38218         | ..... |  |
| Part no. ....             | SAFE13        | ..... | SAFE14        | ..... |  |
| Battery type .....        | 4 x AA        | ..... | 4 x AA        | ..... |  |
| Internal Dimensions ..... | 295x375x240mm | ..... | 445x345x290mm | ..... |  |
| Weight .....              | 13.5kg        | ..... | 18kg          | ..... |  |

## 5. TECHNICAL DESCRIPTION

### 5.1 IDENTIFICATION

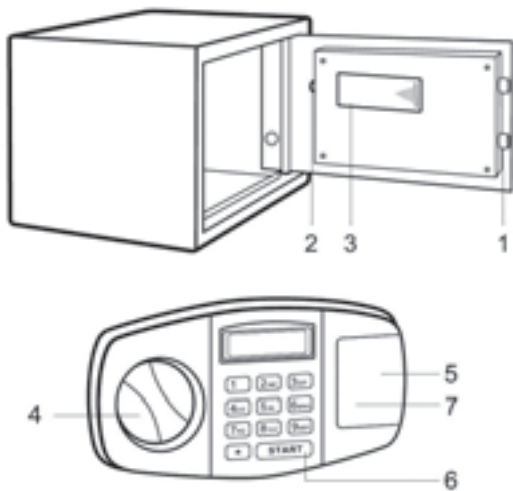

- |                                   |  |
|-----------------------------------|--|
| ① Bolts                           | ⑤ Emergency lock cover/Battery compartment 38212, 38213, 38216, 38218. |
| ② Reset button                    | ⑥ Start button   |
| ③ Battery compartment/38214 only. | ⑦ Power supply: 4x AA batteries  |
| ④ Lock knob.                      |  |

## 6. OPERATING THE SAFE

### 6.1 OPENING YOUR SAFE FOR THE FIRST TIME

Upon first opening, users should open the safe with the emergency key. The operation details refers to "opening the safe with the emergency key".

- Remove emergency lock cover, then insert the emergency key, and turn it counter clockwise.
- Turn the lock knob clockwise to open the door.

CAUTION: Finish operation, pull out the emergency key and keep it in a safe place.

**DO NOT LOCK EMERGENCY KEYS INSIDE THE SAFE!**

### 6.2 INSERTING/REPLACING THE BATTERIES

- Open the door.
- Insert 4x AA batteries into the battery compartment.
- Under normal condition, if the LED display shows "LO-BAT", you should change the batteries after entering "START" button.

CAUTION: Replace 4 fresh batteries by lining them up in a manner as indicated by the "+" and "-" signs. If the batteries have run out or have been removed for thirty minutes or longer, you should reset the user code.

### 6.3 OPENING DOOR

- Press "START" button, and the LED display will show "----"
- Input your user code (6 digits), NOTE: The preset code is 123456 until user has reset. Please see setting user code (6.5). The safe will be unlocked and the green light will display on the key pad.
- Turn the knob clockwise and open the door.

**CAUTION:** The safe has the function of auto-locking, if there has not been any operation after inputting the code, the safe will lock automatically again. If you input the wrong code three times, the safe will lock automatically for 3 minutes.

### 6.4 CLOSING DOOR

- Turn the lock knob counter clockwise to lock the door.

### 6.5 SETTING USER CODE

- With the door open, press "START" button, the LED display will show "----".
- Input your new user code (6 digits), and press the "RESET" button to confirm.
- The display will show "USER-IN" to indicate the code setting is successful.

### 6.6 SETTING THE MASTER CODE

- With the door open, press the "RESET" button, the LED display will show "----".
- Then press the "START" button, and "----" on the LED display will stop flashing, which indicates the lock has entered into the state of code setting.
- Input any 6 digit code, LED display will show "SUPER-IN"
- The display will show "SUPER-IN" to indicate the master code setting is successful.

### 6.7 OPENING THE SAFE IN EMERGENCY

If the electronic circuit malfunctions or the code is unknown. You are still able to use the safe with the 2x emergency keys supplied.

**PLEASE NOTE: Each safe is supplied with 2x emergency keys, these are to be kept in a safe place (NOT INSIDE THE SAFE).**

**Draper Tools will not be held liable for any lost keys.**

**Replacement keys are available for a limited time - but due to the security requirements for safes, the minimum lead time for replacement keys is 30 days as each key is individually manufactured for each lock. Replacement keys are not covered by our warranty and are chargeable.**

 
 
- Remove the cover of the emergency lock (remove batteries if fitted).
- Insert the emergency key to the keyhole, turn counter clockwise, then turn the knob clockwise to open the door.



## 7. SECURE SAFE ON WALL/FLOOR

### 7.1 SECURE SAFE TO WALL/FLOOR

- Drill holes for expansion bolts (or clamping screws).
- Turn the expansion bolts counterclockwise to separate.
- Use the expansion bolts to secure the safe to the wall/floor.
- Make sure the safe is mounted in place as required and then tighten all screws.

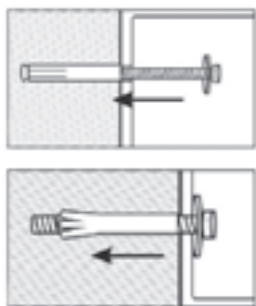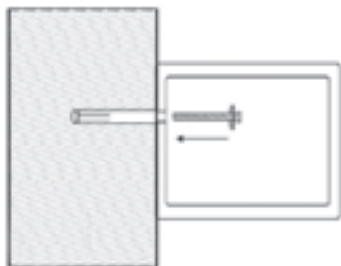

- **DRAPER TOOLS LIMITED,**  
Hursley Road, Chandler's Ford,  
Eastleigh, Hampshire. SO53 1YF. U.K.
- **Helpline:** (023) 8049 4344
- **Sales Desk:** (023) 8049 4333
- **Website:** [www.drapertools.com](http://www.drapertools.com)
- **E-mail:** [sales@drapertools.com](mailto:sales@drapertools.com)
- **Sales Fax:** (023) 8049 4209
- **General Enquiries:** (023) 8026 6355
- **Service/Warranty Repair Agent**  
For aftersales servicing or warranty repairs, please contact the Draper Tools Helpline for details of an agent in your local area.

YOUR DRAPER STOCKIST