



MAINS TESTER

64510 - 4171D INSTRUCTIONS

- Testing range..... 120 - 250V/AC
- Place blade end into live aperture of socket and press your thumb against metal cap on handle.
- If supply is live, the neon bulb in the handle will light.
- Tester will not illuminate if placed in contact with neutral terminal, or if supply is dead.
- Always check bulb is working by using tester first on a live circuit.
- Do not use tester as a screwdriver or lever as this will damage the tester.

Helpline: +44 (0) 23 8049 4344 Sales Desk: +44 (0) 23 8049 4333 General Enquiries: +44 (0) 23 8026 6355
internet: drapertools.com email: sales@drapertools.com
