



3 PIECE COIL SPRING COMPRESSOR



68614 – N151 INSTRUCTIONS FOR USE

HEALTH AND SAFETY INFORMATION

IMPORTANT

Always wear safety glasses and gloves when using these compressors. For detailed and concise instructions on the correct use of this tool, refer to the vehicle manufacturer's or Haynes workshop manuals.

WARNING:

When compressing springs, always ensure clamps remain correctly aligned as pressure is applied. When releasing pressure from springs for replacement, etc., undo both clamps evenly 2 to 3 turns on the bolts at a time.

INSTRUCTIONS FOR USE

1. Fit the spring compressors onto the coil spring, ensuring they are opposite each other.
2. Compress the spring evenly by tightening the hexagon headed bolts on both compressors. This can be done using any ½" square drive driving tool or a 24mm wrench or socket.
3. When fully compressed the shock absorber can be removed. When removing the compressors, ensure that both clamps are slackened off evenly.
4. Maximum operating torque should not exceed 20lb-ft (27Nm) for operator safety.

