



85L CONTRACTORS WHEELBARROW

82755



Read this manual in full before using this product and retain it for future use. Always use the latest version of the manual. Please visit drapertools.com/manuals for the latest version.


1. Specification

| | |
|-------------------------|----------------------------------|
| Stock No.: | 82755 |
| Part No.: | BWB |
| Capacity: | 85L |
| Max static load: | 160kg |
| Dimensions (assembled): | L 1,355 x W 620 x H 585mm |
| Net weight: | 11.6kg approx. |

2. Identification

EN

2.1 Overview

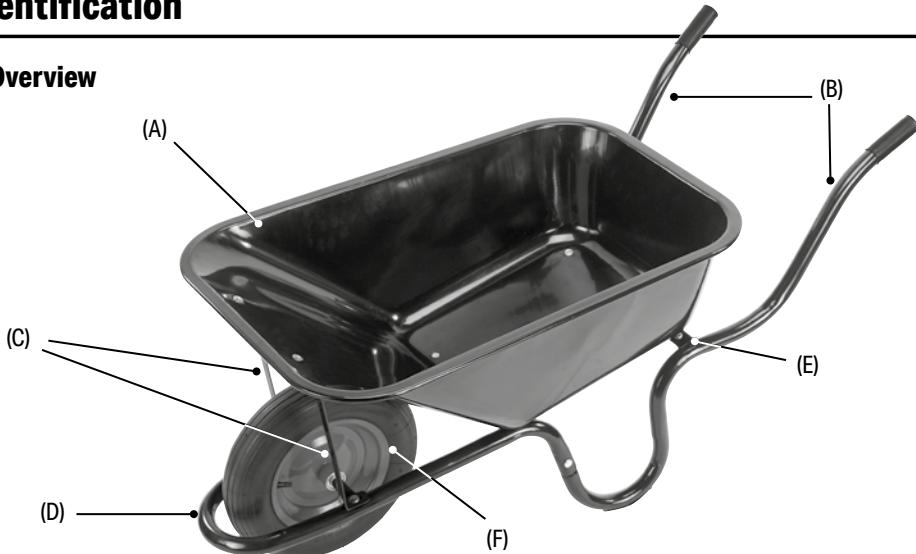

2.2 What's in the box?

| | | |
|-----|----------------------|-----|
| (A) | (B) | (C) |
| x 1 | (B1) (B2) x 1 | x 2 |
| x 1 | (E2) (E1) (E2) x 1 | x 1 |
| x 1 | | |
| x 4 | x 4 | x 4 |

(A) 1 x Tray
(B) 2 x Handle
B1 – Left bracket
B2 – Right bracket
(C) 2 x Support brackets
(D) 1 x Wheel frame
(E) 1 x Axle
E1 – 1 x Axle bar
E2 – 2 x Axle caps

(F) 1 x Crossbar
(G) 1 x Wheel
(H) 4 x M8 x 45mm bolts , M8 locking nuts and M8 washers
(I) 4 x M8 x 20mm countersunk bolts, M8 locking nuts and M8 washers
(J) 4 x M8 x 15mm countersunk bolts, M8 locking nuts and M8 washers

3. Assembly

EN

Important

- It is recommended that two persons assist with assembly
- Secure all bolts very loosely until all parts are assembled, then fully tighten all fixings

1. Place wheel frame (D) onto handle brackets (B1 & B2) and secure with 2 X M8 x 45mm bolts, washers and locking nuts (H).

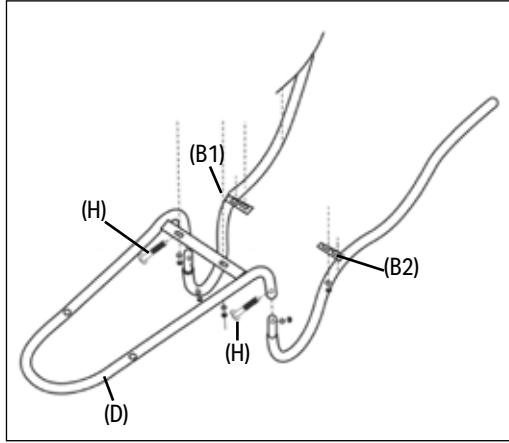


Fig. 1

2. Place the crossbar (F) onto handle bracket tabs and secure the outer holes using 2 X M8 x 15mm bolts, washers and locking nuts (J). Ensure the holes in the cross bar are correctly aligned with the bracket tabs before fitting the tray and tightening the nuts.

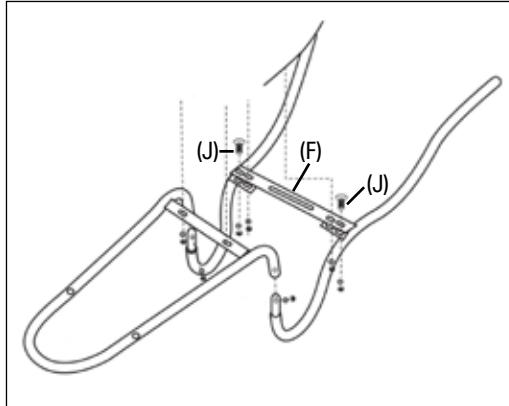


Fig. 2

3. Fit the tray (A) to the frame using 4 x M8 x 20mm bolts, washers and locking nuts (I). Attach the top of the support brackets (C) to the front of the tray using 2 x M8 x 15mm bolts, washers and nuts (J).

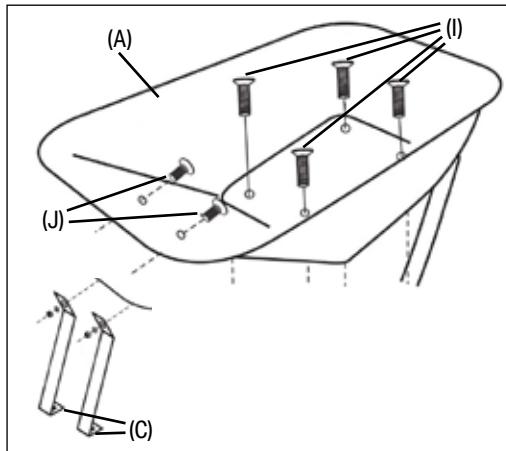


Fig. 3

4. Attach the wheel to the axle bar (E1) and axle caps (E2). Then position the axle caps to the underside of the frame and the end of the support brackets to the top. Secure together using 2 X M8 x 45mm bolts, washers and locking nuts (H). Assemble axle – arrows showing wheel (G) and axle caps (E2) onto either end of the axle bar (E1) – use existing drawing from wheel frame, remove frame and move wheel to between axle bar and far axle cap]

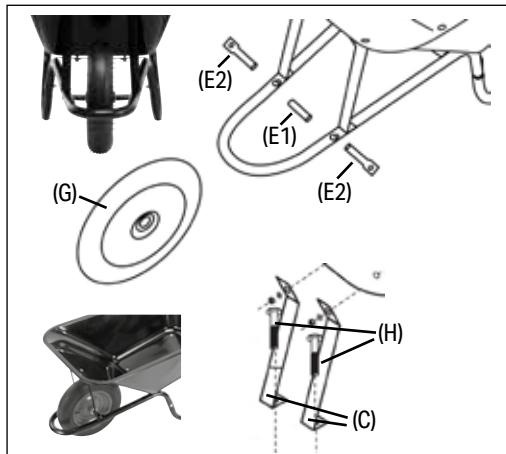


Fig. 4

Contact Details

Draper Tools

Draper Tools Limited
Hursley Road
Chandler's Ford
Eastleigh
Hampshire
SO53 1YF
UK

Website: drapertools.com

Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344

Telephone Sales Desk: +44 (0) 23 8049 4333

General Enquiries: +44 (0) 23 8026 6355

General Fax: +44 (0) 23 8026 0784

Delta International

Delta International BV
Oude Graaf 8
6002 NL
Weert
Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.