



RECHARGEABLE MINI

FLOOD LIGHT AND POWER BANK

88595



IMPORTANT: Please read these instructions carefully to ensure the safe and effective use of this product and save these instructions for future reference. This manual has been compiled by Draper Tools and is an integrated part of the product with which it is enclosed and should be keet with it for future references.

This manual describes the purpose for which the product has been designed and contains all the necessary information to ensure its correct and safe use. We recommend that this manual is read before any operation or, before performing any kind of adjustment to the product and prior to any maintenance tasks. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product taseft.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product. Whilst every effort has been made to ensure accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

1 TITLE PAGE

1.1 INTRODUCTION

USER MANUAL FOR:

RECHARGEABLE MINI FLOOD LIGHT AND POWER BANK

Stock no. 88595

1.2 REVISION HISTORY

Date first published: March 2021.						

As our user manuals are continually updated, users should make sure that they use the very latest version.

Downloads are available from: http://www.drapertools.com/manuals

DRAPER TOOLS LIMITED HURSLEY BOAD WEBSITE: drapertools.com
PRODUCT HELP LINE: +44 (0) 23 8049 4344

CHANDLER'S FORD

GENERAL FAX: +44 (0) 23 8026 0784

EASTLEIGH HAMPSHIRE SO53 1YF UK

1.3 UNDERSTANDING THIS MANUAL'S SAFETY CONTENT

WARNING! Information that draws attention to the risk of injury or death.

CAUTION!

Information that draws attention to the risk of damage to the product or

surroundings.

1.4 COPYRIGHT © NOTICE:

Copyright @ Draper Tools Limited.

Permission is granted to reproduce this publication for personal & educational use only. Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases this copyright notice must remain intact.

2. CONTENTS

2.1 CONTENTS

1	TITLE	PAGE			
	1.1	INTRODUCTION	2		
	1.2	REVISION HISTORY			
	1.3	UNDERSTANDING THIS MANUAL'S SAFETY CONTENT			
	1.4	COPYRIGHT © NOTICE	.2		
2	CONTE				
	2.1	CONTENTS	3		
3	WARRA				
	3.1	WARRANTY	4		
4	INTRODUCTION				
	4.1	SCOPE			
	4.2	SPECIFICATION			
	4.3	HANDLING AND STORAGE	. 4		
5		HAND SAFETY INFORMATION			
	5.1	GENERAL SAFETY INSTRUCTIONS	4		
	5.2	CONNECTION TO THE POWER SUPPLY (CHARGER)			
6		FICATION			
	6.1	IDENTIFICATION			
	6.2	WHAT'S IN THE BOX?	5		
7		KING & CHECKING	_		
	7.1	PACKAGING	5		
8		RING THE MINI FLOOD LIGHT	_		
	8.1	CHARGING	5		
9		TING THE MINI FLOOD LIGHT	_		
	9.1	USING THE ON/OFF SWITCH			
10		NANCE			
	10.1	MAINTENANCE	5		
11		NATION OF SYMBOLS			
	11.1	EXPLANATION OF SYMBOLS	5		
12	DISPOS				
	12.1	DISPOSAL	5		

3.1 WARRANTY

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact

Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF. England. Telephone Sales Desk: (023) 8049 4333 or Product Help Line (023) 8049 4344.

A proof of purchase must be provided with the tool.

A proof of purchase must be provided with the tool. If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This warranty period covering parts/labour is 12 months from the date of purchase except where tools are hired out when the warranty period is 90 days from the date of purchase. This warranty does not apply to any consumable parts, any type of battery or normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agent.

Note: If the tool is found not to be within the terms of warranty, repairs and carriage charges will be quoted and made accordingly.

This warranty applies in lieu of any other warranty expressed or implied and variations of its terms are not authorised.

Your Draper warranty is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the warranty period.

Please note that this warranty is an additional benefit and does not affect your statutory rights. Draper Tools Limited.

4. INTRODUCTION

4.1 SCOPE

Part of our core range, this product is suitable for enthusiasts and tradespersons alike. This flood light is a compact size, durable and has three output settings. The adjustable bracket can rotate through 180°, it has a strong magnet on the base and it also features a hanging hook, USB input and output, power bank function and a portable finger ring.

4.2 SPECIFICATION

4.2 OF LOII ICATION	
Stock no.	88595
Part no	RMFL/1000
COB LED.	
Lumens:	
HighLowFlash	
Low	500 lumens
Flash	1000 lumens
Light operating time:	
HighFlash	3 hrs
Low	6 hrs
Flash	3 hrs
Total dimensions	105 x 95 x 40 mm
Battery:	
Tyne	Lithium
Rated voltage	3.7V
Rating	4.4Ah
Rated voltage Rating Charging time	5 – 6 hrs
<u> </u>	

4.3 HANDLING AND STORAGE

Do not drop the mini flood light as this can damage and shorten the life span of the unit. Store in a dry location as damp conditions can damage the mini flood light. Charging on a regular basis is advised to prolong the life of the battery cells.

HEALTH AND SAFETY INFORMATION

5.1 GENERAL SAFETY INSTRUCTIONS eral Power Tools Safety Warn

General Power Tools Safety Warnings
WARNING: Read all instructions. Failure to follow all
instructions listed below may result in electric shock, fire and/or
serious injury.
Save all warnings and instructions for future reference.
The term "power tool" in the warnings refers to your mains
operated (corded) power tool or battery operated (cordless)
power tool.

- Work area safety 1)
 - Keep work area clean and well lit. Cluttered or dark areas invite accidents.
 - areas invite accidents.

 Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

 Keep children and bystanders away while operating a power tool. Distractions can cause you to lose
 - ntrol.
- ctrical Safet 2) Ele
 - Power tool plugs must match the outlet. Never modi the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electrical shock.
 - matching outlets will reduce risk of electrical shock.

 Avoid body contact with earthed or grounded
 surfaces such as pipes, radiators, ranges and
 refrigerators. There is an increased risk of electric
 shock if your body is earthed or grounded.

 Do not expose power tools to rain or wet condition
 Water entering a power tool will increase the risk of
 electric shock.

 - Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
 - When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of elec shock.
 - If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock. f)
- electric shock.

 Personal Safety
 a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

 It is not a proceed matchine and process the process of the p
 - Use personal protective equipment. Always wear ey protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
 - injuries.

 Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your linger on the switch or energising power tools that have the switch on invites accidents.

 Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations
- a)
- tool in unexpected situations.
 Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
 If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust related hazards.

 wer Tool Use And Care
 Do not force the power tool. Use the correct power.
- 4) Po
 - Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

 - The power and sarer at the rate for which it was designed.

 Do not use the power tool if the switch does not tut it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

 Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally. Store idle power tools or of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool were tool or these instructions to operate the power tool were tool are dangerous in the hands of untrained users.
 - users.

 Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools. operatio... before use. Mai ointained power

 - maintained power tools.

 Keep cutting tools sharp and clean. Properly
 maintained cutting tools with sharp cutting edges are
 less likely to bind and are easier to control.

 Use the power tool, accessories and tool bits etc.,
 in accordance with these instructions, taking into
 account the working conditions and the work to be
 performed. Use of the power tool for operations
 different from intended could result in a hazardous
 situation.
- ttery tool use and care

 - Battery tool use and care

 a. Recharge only with the charger specified by the
 manufacturer. A charger that is suitable for one type of
 battery pack may create a risk of fire when used with
 another battery pack.

 b. Use power tools only with specifically designated
 battery packs. Use of any other battery packs may
 create a risk of injury and fire.

 c. When battery pack is not in use, keep it away from
 other metal objects, like paper clips, coins, keys,
 nalls, screws or other small metal objects, that can
 make a connection from one terminal to another.
 Shorting the battery terminals together may cause burns
 or a fire.
 - or a tire.

 Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water, If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

6) Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

5.2 CONNECTION TO THE POWER SUPPLY (CHARGER)

Make sure the power supply information on the machine's rating plate are compatible with the power supply you intend to connect it to.

It is Class 3 (SELV); is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

If an extension lead is required, use an approved and compatible lead rated for this appliance. Follow all the instruction supplied with the extension lead.

This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

6. TECHNICAL DESCRIPTION

6.1 IDENTIFICATION



- Battery indicator 1
- 2 On/off switch
- Charger socket (3)
- Handle (4) (5) Magnet

6.2 WHAT'S IN THE BOX?

As well as the product; there is a part not fitted or attached to it.

(6) Type-C USB cable



7. UNPACKING & CHECKING

7.1 PACKAGING

Carefully remove the mini flood light from the packaging and examine it for any sign of damage that may have happened during shipping. If any part is damaged or missing; please contact the Draper Helpline (the telephone number appears on the Title page) and do not attempt to use the lamp.

Warning! Some of the packaging materials used may be harmful to children. Do not leave any of these materials in the reach of children.

If any of the packaging is to be thrown away, make sure they are disposed of correctly; according to local regulations.

8. PREPARING THE MINI FLOOD LIGHT

8.1 CHARGING

Important: Fully charge before first use.

Make sure the light is switched off before commencing charging.

To charge it, connect the cable into the socket under the dust cover, then connect it to either a main power supply or a USB power source. The battery indicator LED will turn red to indicate that it is charging. Once it is fully charged, the battery indicator will go green.

Note: Disconnect from the mains as soon as the charge is complete. Unplug the charging lead from

the lamp

Note: Do not leave the battery in a fully discharged condition. Recharge it at least once every 30 days and always fully charge it.

OPERATING THE MINI FLOOD LIGHT

9.1 USING THE ON/OFF SWITCH - FIG. 1

The first press of the on/off switch ② will operate the high mode of the flood light. The second press will operate the low mode of the flood light.

The third press will operate the flash.

The fourth press will turn the light off.

Direct the lens away from eyes before switching on.

Note: There is a memory function for the on/off switch. If you leave the mini flood light in one mode for 5 seconds, then switch it off, next time it is switched on, it will be in the mode last used.



FIG. 1

10. MAINTENANCE

10.1 MAINTENANCE

Keep light clean and check for damage before every use. If damage is observed remove from use until is repaired.

Note: There are no user serviceable parts on this light. For battery replacement etc. please return to your nearest Draper authorised dealer for repair.

Important: LED arrays are designed to allow individual LEDs to cease functioning without causing the entire array to fail. This could be as a result of shock or impact. Shock or impact with invalidate warranty.

11. EXPLANATION OF SYMBOLS

11.1 EXPLANATION OF SYMBOLS



Class III construction (separated extra-low voltage (SELV)).



Protected against water splashing from any angle.



WEEE Do not dispose of Waste Electrical & Electronic Equipment in with domestic rubbish.



Non-Self-Resetting protective device



For indoor use only. Do not expose to rain.



Short-circuit-proof safety isolating transformer.

12. DISPOSAL

12.1 DISPOSAL

- At the end of the product's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.
- * Waste Electrical & Electronic Equipment.

In all circumstances

- Do not dispose of power tools with domestic waste.
 Do not incinerate.
- Do not abandon in the environment.
- Do not dispose of WEEE* as unsorted municipal waste.



CONTACTS

Draper Tools Limited, Hursley Road, Chandler's Ford, Eastleigh, Hampshire. SO53 1YF. U.K.

Help line:+44 (0) 23 8049 4344

Sales desk: +44 (0) 23 8049 4333

Internet: www.drapertools.com

E-mail: sales@drapertools.com

General enquiries: (023) 8026 6355

Service/Warranty Repair Agent:

For aftersales servicing or warranty repairs, please contact the Draper Tools Helpline for details of an agent in your local area.

YOUR DRAPER STOCKIST

©Published by Draper Tools Limited.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical photocopying, recording or otherwise without prior permission in writing from Draper Tools Ltd.