

**EN**

Original Instructions
Version 1
October 2026

OIL TRANSFER PUMP

90141

Intended Use

This product is designed for pumping gear oil and other lubricating oils with similar high viscosity and suitable for use with most 20 and 25-litre gear oil drums.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

Read this manual in full before using this product and retain it for future use. Always use the latest version of the manual. Please visit [drapertools.com/manuals](https://www.drapertools.com/manuals) for the latest version.

Specification

Stock No.	90141
Part No.	GOP1
Flow rate	150ml per stroke
Minimum pump depth	325mm
Maximum pump depth	500mm
Collar diameter	2" BSP adaptor
Hose length (approx.)	1500mm
Net weight	1.07kg

Health and Safety Instructions

Important: Read all the Health and Safety instructions before attempting to operate, maintain or repair this product. Failure to follow these instructions may result in injury or damage to the user or the product.

- Ensure all health and safety, local authority, and general workshop practice regulations are strictly adhered to when using this pump.
- Familiarise yourself with the application and limitations of this product
- Ensure appropriate PPE (Personal Protective Equipment) is worn when using this pump including safety eye protection and protective gloves.
- Keep the work area clean, uncluttered and ensure there is adequate lighting.
- Dispose of oil separately and in accordance with local regulations; **DO NOT** abandon it in the environment.
- **DO NOT** use the pump to transfer solvents.
- **DO NOT** use the pump for any purpose other than for which it is designed.
- **ALWAYS** place the oil drum on a flat even surface.
- **DO NOT** place or use the pump near heat sources.
- **DO NOT** attempt to move the oil drum by pulling on the fluid transfer hose.
- Keep the pump clean and store in a safe dry location, out of the reach of children when not in use.

Using the Pump

- Insert the bottom of the pump tube into the gear oil drum.
- Then secure the pump to the drum using the collar.
- Check the collar is secure before operating the pump handle.