

**DRAPER**<sup>®</sup>

**D20**  
MULTI-TOOL BATTERY SYSTEM

**GB** ORIGINAL LANGUAGE

20V

# WIRELESS SPEAKER

98436/94903



UK  
CA **CE**

**F** HAUT-PARLEUR  
SANS FIL

20V  
98436/94903

**E** ALTAVOZ INALÁMBRICO

20V  
98436/94903

**P** COLUNA SEM FIOS

20V  
98436/94903

**D** 20V  
DRAHTLOS-  
LAUTSPRECHER

98436/94903

**NL** 20V  
DRAADLOZE LUID-  
SPREKER

98436/94903

# 1. INTRODUCTION

(GB)

## 1.1 SCOPE

Bring rich sound to wherever the job takes you with the versatile and durable wireless speaker. The speaker is equipped to wirelessly connect to mobile devices. In addition, it has one auxiliary port for MP3 compatibility and one USB port for charging mobile devices. For maximum versatility it can be powered by D20 Draper batteries.

Part of our core range, this product is suitable for enthusiasts and tradespersons alike. Any application other than that it was intended for, is considered misuse.

This product is not a toy and must not be used by children or any person with reduced physical, sensory or mental capabilities or lack of experience and knowledge, or people unfamiliar with these instructions.

Local regulations may restrict the age of the operator.

## 1.2 UNDERSTANDING THIS MANUALS SAFETY CONTENT

**Warning!** – Information that draws attention to the risk of injury or death.

**Caution!** – Information that draws attention to the risk of damage to the product or surroundings.

## 1.3 EXPLANATION OF SYMBOLS



Read the instruction manual.



Do not abandon into the environment.



Keep out of the reach of children.



**Warning!**



Machine weight.



Class II construction  
(Double insulated).



WEEE –  
Waste Electrical & Electronic Equipment.  
Do not dispose of Waste Electrical & Electronic  
Equipment in with domestic rubbish.



Lithium-ion product.

Li-ion



Do not incinerate or throw  
onto fire.



For indoor use only.  
Do not expose to rain.



Fuse protective device.



Polarity indication.



Rated voltage.



European conformity.



UK Conformity Assessed.



European conformity.

# 2. SPECIFICATION

(GB)

## 2.1 SPECIFICATION

Stock No. .... 98436/94903

Part No. .... D20WS/ DTKD20PTK/SPK

Aux input socket .....3.5mm

Output power..... 2 x 3W

Operating range ..... Up to 10M (30ft)

Weight (machine) ..... 11kg

# 3. HEALTH AND SAFETY INFORMATION

(GB)

## 3.1 GENERAL SAFETY INSTRUCTIONS FOR POWER TOOL USE

**Warning!** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

**Save all warnings and instructions for future reference.**

The term “power tools” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

## 1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

## 2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

## 3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection use for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before**

**turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

## 4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

## 5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacements parts.** This will ensure that the safety of the power tool is maintained.

## 3.2 SAFETY INSTRUCTIONS FOR MAINS POWERED CHARGERS & BATTERY PACKS

### Chargers

- The charger is for indoor use only.
- Prior to plugging the charger in to the supply, check that the plug, cable and charger casing are in good condition. If any are damaged, have the defective part(s) replaced immediately by a suitably qualified person.
- Only use a correctly rated mains outlet to provide power, do not plug into site generators, attach to engine generators or D.C. sources. Do not use a mains socket outlet that is not switched.
- Use the correct Draper charger in conjunction with its corresponding battery pack (consult the Draper website for more information or to find your local stockist).
- Do not charge any other batteries with Draper chargers. Any other application is considered misuse.
- Do not attempt to charge battery packs that are too hot (over 30 C) or too cold (under 5 C), if these conditions apply set the battery pack aside to “normalise” before proceeding with the charging operation.
- Set up the charger and cable in a safe place where it won't be knocked, tripped over, stepped on, etc. and where it is well ventilated. Make sure the ventilation slots in the charger case are not obstructed.
- Inspect the battery pack for damage, if it is undamaged, plug it into the charger, ensuring the correct orientation.
- Switch the charger on and check that the correct indicators illuminate, allow the battery pack to charge (see the specific instructions for your charger). Once charging is complete, switch the charger off, disconnect from power supply, remove the battery pack and store.

### Battery packs

- Before charging, read the instructions.
- Do not expose to rain.
- Only use Draper D20 battery packs with this product. Consult your Draper stockist for details.
- Do not charge any other batteries with Draper

chargers. Any other application is considered misuse.

- The charger must be disconnected from the power supply before removing the battery.
- The battery must be removed from the appliance before it is recycled.
- The battery is to be disposed of in-line with local authority procedures.
- Do not crush, open or burn the battery. Exposure to potentially harmful materials may occur.
- In case of fire use CO2 or dry chemical extinguisher.
- Do not expose to high temperatures >50°C. The battery may degrade at high temperatures.
- Charge battery in conditions between 5°C to 30°C with the designated charger for the battery.
- Do not use battery if it has been stored at 5°C or less. Allow it to “normalise” at room temperature before usage/charging.

### **Warning! – Leaking battery packs**

- The electrolyte in battery packs is corrosive. Avoid contact with the skin.
- If contact is made, flush the area with clean water, pat dry and seek medical attention at the earliest opportunity.
- Inform medical personnel that the contaminant is a “high alkaline, corrosive liquid”.
- If electrolyte comes into contact with the eyes, flush with copious amounts of water only. Seek immediate medical attention, relaying the information above.

## 3.3 RESIDUAL RISK

**Important:** Although the safety instructions and operating manuals for our tools contain extensive instructions of safe working with power tools, every power tool involves a certain residual risk which can not be completely excluded by safety mechanisms. Power tools must therefore always be operated with caution!

## 3.4 CONNECTION TO THE POWER SUPPLY

**Caution:** Risk of electric shock. Do not open.

This appliance is supplied with an approved plug and cable for your safety.


Never use a damaged or incomplete plug.

This appliance is Class II<sup>1</sup> and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

Carefully select an extension lead. Some machines are not suitable for use with extension leads. If the tool is designed for use outdoors, only use an extension lead suitable for that environment in conjunction with an RCD adaptor. When using an extension lead, select one capable of handling the current (amps) drawn by the machine in use. Ensure the cable is fully unwound regardless of the distance between the power supply

and the tool. Excess current (amps) and a coiled extension lead will cause the cable to heat up and can result in fire.

Keep extension leads away from moving hazardous parts to avoid damages to the cable which can lead to contact with live parts. Position cable safely to avoid tripping over.

†Double insulated : This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

**Important!** If using an extension lead, follow the instructions that came with your lead regarding maximum load while cable is wound. If in doubt, ensure that the entire cable is unwound. Using a coiled extension lead will generate heat which could melt the lead and cause a fire.

## 4. UNPACKING AND CHECKING



### 4.1 PACKAGING


Carefully remove the product from the packaging and examine it for any sign of damage. Check contents against the parts shown in Fig A. If any part is damaged or missing, please contact the Draper Help Line (see back page). Do not attempt to use the product!

The packaging material should be retained during the warranty period, in case the product needs to be returned for repair.

#### **Warning!**

- Some of the packaging materials may be harmful to children. Do not leave any of these materials in reach of children.
- If any of the packaging is to be thrown away, make sure it is disposed of correctly, according to local regulations.

## 5. IDENTIFICATION – FIG.A

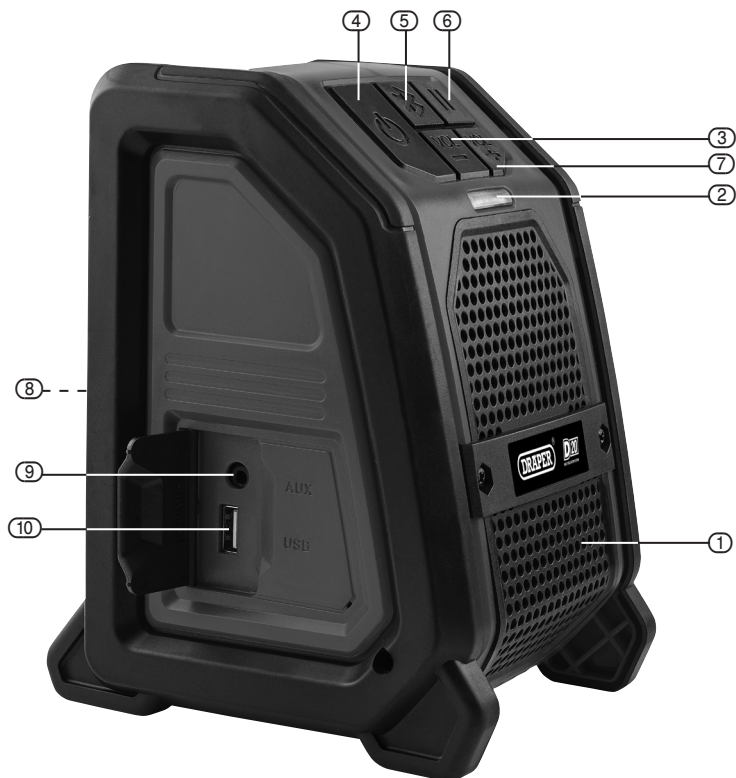

- |   |  |   |  |
|---|--|---|--|
| ① | Speaker.   | ⑥ | Play/Pause button.   |
| ② | Indicator light.   | ⑦ | Volume up button (Short press).<br>Next track button (Long press). |
| ③ | Volume down button (Short press).<br>Previous track button (Long press). | ⑧ | Battery cartridge.   |
| ④ | Power button.  | ⑨ | Aux in port.   |
| ⑤ | Pairing button.  | ⑩ | USB charging socket.   |

FIG.A

**Note:** For details of our full range of accessories and consumables, please visit [drapertools.com](http://drapertools.com)

## 6. OPERATION AND USE

### 6.1 PAIRING AND CONNECTING A DEVICE TO THE SPEAKER – FIG.1

You need to pair your device with the speaker before you can auto-link to play/stream music through the speaker. Pairing creates a bond so two devices can recognize each other.

To allow for better sound quality, we recommend setting the volume level to around two-thirds on your device, then adjust the volume on the speaker as

required.

- Press the Power button ④ to turn on the speaker. The indicator light ② will flash blue.
- The blue light indicator ② flashes faster to indicate the speaker is ready for pairing.
- Turn on Bluetooth® on your device according to the device's user manual to link to the speaker.
- Select the device named from the suggested list of devices to pair with.
- Once connected, there will be a beep sound and the indicator light ② will remain solid blue.

- Simply select and play any music from your source device. Volume control, play/pause and track navigation can be adjusted from your source device, or directly from the speaker.

**Note:**

If 2 devices are pairing for the first time, and both search for the speaker, it will show its availability on both devices. However, if one device links with this unit first, then the other device won't find it in the list.

If your device is temporarily disconnected to the speaker, you will need to manually reconnect your device again.

If the speaker shows on your device list but your device cannot connect with it, please delete the item from your list and re-pair the device with the speaker following the steps described previously.

The effective operation range between the system and the paired device is approximately 10 metres (30 feet). Any obstacle between the system and the device can reduce the operational range.

Bluetooth® connectivity performance may vary depending on the connected devices.

Please refer to the Bluetooth® capabilities of your device before connecting to the speaker. All features may not be supported on some devices.



FIG. 1

**6.2 PLAYING AUDIO FILES WIRELESSLY – FIG.2**

When you have successfully connected the speaker with the chosen Bluetooth® device you can start to play your music using the controls on your connected device.

- Once playing has started adjust the volume to the required setting by short pressing the Volume buttons (3) and (7) on the speaker or in the usual way on your device.
- Use the controls on your device to play/pause and navigate tracks. Alternatively, navigate tracks using volume buttons (3) and (7) on the speaker (long presses).



FIG. 2

**Note:** Not all player applications or devices may respond to all of these controls.

Some mobile phones may temporarily disconnect from the speaker when you make or receive calls. Some devices may temporarily mute their audio streaming when they receive text messages, emails or for other reasons unrelated to audio streaming. Such behaviour is a function of the connected device and does not indicate a fault with the speaker.

**6.3 DISCONNECTING YOUR DEVICE – FIG.3**

Press and hold the pairing button (5) for 2-3 seconds to disconnect with your device. The indicator light flashes blue (2), indicating the speaker is discoverable again for pairing.



FIG. 3

\* The Bluetooth® word is a registered trademark owned by the Bluetooth SIG Inc.

**6.4 PLAYING MUSIC VIA AUXILIARY INPUT SOCKET – FIG.7**

A 3.5mm Auxiliary input socket (8) is provided on the right side of the unit to permit an audio signal to be fed into the unit from any devices that features a headphone or audio output, such as an iPod, MP3 or CD player.

- Connect a stereo or mono audio source (for example, iPod, MP3 or CD player) to the Auxiliary input socket (marked 'AUX') and the Aux in indicator turns green indicating the speaker is in auxiliary input

mode.

- Adjust the Volume control on your iPod, MP3 or CD player to ensure an adequate signal and then adjust the volume on the speaker for comfortable listening.
- To have the better sound quality, we recommend setting the volume to more than two-thirds level on your audio device and then adjust the volume on the speaker as required.

**Note:** When Aux in socket is connected to an audio device, wireless connection will be disabled to minimize power consumption.



FIG. 4

## 6.5 BATTERY PACK CHARGING – FIGS. 5 – 6

This power product is supplied “bare”, without battery pack or charger. Compatible batteries, chargers and accessories are available through Draper Tools stockists.

**Important:** Only Draper D20 designated battery packs and chargers can be used in conjunction with this product. Use of any other third party battery packs/chargers with this product is considered misuse and will invalidate the product’s warranty.

Once connected to the mains supply, recharging of the battery can be left generally unsupervised, requiring minimal attention. Complex circuit construction monitors the battery condition, adjusting the recharge current to suit. When the recharge cycle is complete, to maintain the full capacity, a low output current will continue as required.

**⚠ Warning!** Check the condition of the charger and battery prior to each charge. If there is any sign of damage then do not commence charging, seek advice from Draper Tools.

The battery pack is supplied un-charged and must be charged before initial use.

To charge the battery pack (12), it must first be removed from the tool.

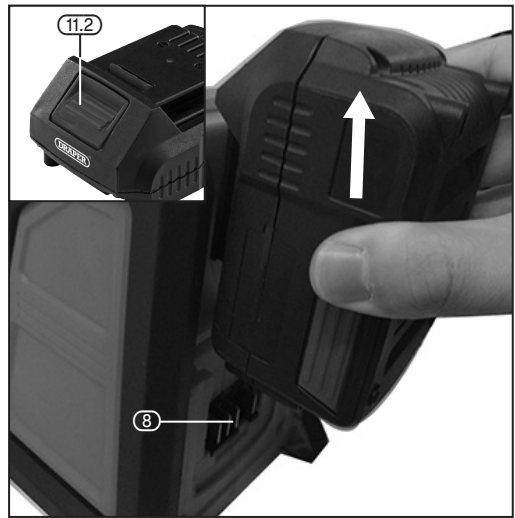


FIG. 5

To release the battery pack:

- Press the battery release button (11.1) and gently slide the battery pack off.
- Plug the battery charger (12) unit into a power socket.
- The red LED (12.1) will illuminate to show the charger has power.
- Slide the battery into the charger (the battery is shaped to fit into the charger one way only).
- After a few seconds delay, the red LED (12.1) will flash to show that charging has begun, then illuminate solid red.
- Whilst the battery is charging, the green LED (12.2) will flash, (the red LED will go from flashing to constant red).
- When the battery is fully charged the green LED stops flashing and remains a constant green. The red LED will extinguish.

**Caution:** Do not pull the plug out of the power supply by pulling on the cord. Make sure to grasp the plug when removing from power supply to avoid damaging the cord.

To remove the battery from the battery charger:

- Supporting the battery charger with hand, pull out the battery from the battery charger.

**Caution:** If the battery charger has been in continuous use it will be hot. Once the charging has been completed, leave the charger 15 minutes to cool until next use.





FIG. 6

**Caution:** Only use the plug to disconnect from the power supply, never use the cable.

**Caution:** If the battery charger has been in continuous use it will be hot. Once charging is completed, leave the charger to cool.

Only charge cooled batteries.

## 7.12 BATTERY PACK PROTECTION FEATURES

**Overcharging protection:** When the battery pack is fully charged, the transformer/charger will automatically shuts off, protecting the internal components.

**Over-discharging protection:** Stops the battery pack from discharging beyond the recommended lowest safety voltage.

**Overheating protection:** An internal thermistor cut-off sensor shuts off the battery pack should it become too hot during operation. For example, if the tool is overloaded or used for extended periods. 30 minutes cooling time may be required.

**Current protection:** If the battery is overloaded or the maximum current draw exceeded, the battery will shut off to protect internal components. The battery pack will resume operation once the current draw is at a safe level.

**Short circuit protection:** The battery pack will stop operating immediately if it was to short circuit.

## 7.13 BATTERY PACK CHARGE STATUS – FIG.7

Press the charge level indicator button (11.2) to display the battery charge level.

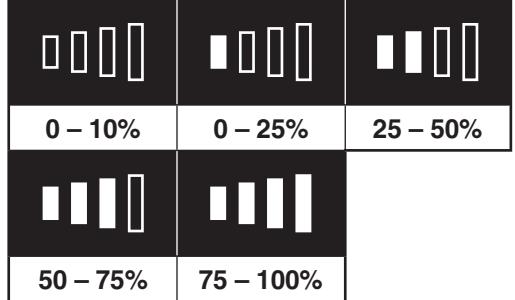


FIG. 7

## 7.14 BATTERY LIFE EFFICIENCY AND CHARGING ADVICE

- Avoid recharging at high temperatures.

A rechargeable battery will be hot immediately after use. If such a battery is recharged immediately after use the battery life will be shortened. Leave the battery and recharge it after it has cooled.

- The battery should only be used and/or charged when battery temperature is between 5°C and 30°C.
- The battery needs to be warmed-up or cooled down to prevent damaging to the batteries internal components.

**Note:** If battery is too hot or too cold, allow it to 'normalise' before use or charging.

**Note:** Failure to warm up or cool down a battery could result in serious damage to the battery, charger and user.

## 8. MAINTENANCE AND TROUBLESHOOTING

### 8.1 TROUBLESHOOTING GUIDE

Problem	Possible Cause	Remedy
Speaker does not operate	Battery discharged	Charge battery
	Battery faulty	Replace battery
	Battery hot	Allow to cool
	Unsure	Return to an authorised service agent for diagnosis
Cannot pair with your device	Too far away	Move closer to speaker
	Obstacle between device and speaker reducing operational range	Move closer to speaker
	Another device already connected/ paired	Disconnect other devices
	Device not compatible	Use alternative device
Can't hear any sound	Volume too low	Turn volume up
	Device was disconnected	Reconnect device

### 8.2 MAINTENANCE

Regular inspection and cleaning reduces the necessity for maintenance operations and will keep your tool in good working condition.

The motor must be correctly ventilated during tool operation. Avoid blocking the air inlets and vacuum the ventilation slots regularly.

Do not use solvents or fuels to clean the product. When not in use, store the product in a safe, dry place.

## 9. WARRANTY

### 9.1 WARRANTY

Draper power tools have been carefully tested & inspected and are guaranteed to be free from defective materials or workmanship.

For details of warranty and terms and conditions please visit the Draper Tools website at [www.drapertools.com/warranty](http://www.drapertools.com/warranty)

10.1 DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not dispose of WEEE\* as unsorted municipal waste.



Li-ion

\* Waste Electrical & Electronic Equipment.

10.2 BATTERY PACK DISPOSAL INFORMATION

Warning!

- Do not put battery packs in a fire or mutilate – cells may burst or release toxic materials.
- Do not short circuit cells, may cause burns.
- The battery pack must be removed from the appliance before it is scrapped.
- The battery pack is to be disposed of safely.
- Do not mutilate batteries, corrosive electrolyte will be released.
- Do not dispose of batteries or cells in a charged condition.

Expired batteries must be recycled/disposed of in accordance with the appropriate regulation or legislation. They should be returned to your local warranty agent/ stockist.

Notes section with horizontal dotted lines for writing.