


SELF PROPELLED PETROL LAWN MOWER

08672 – LMP460 SPARE PARTS DRAWING

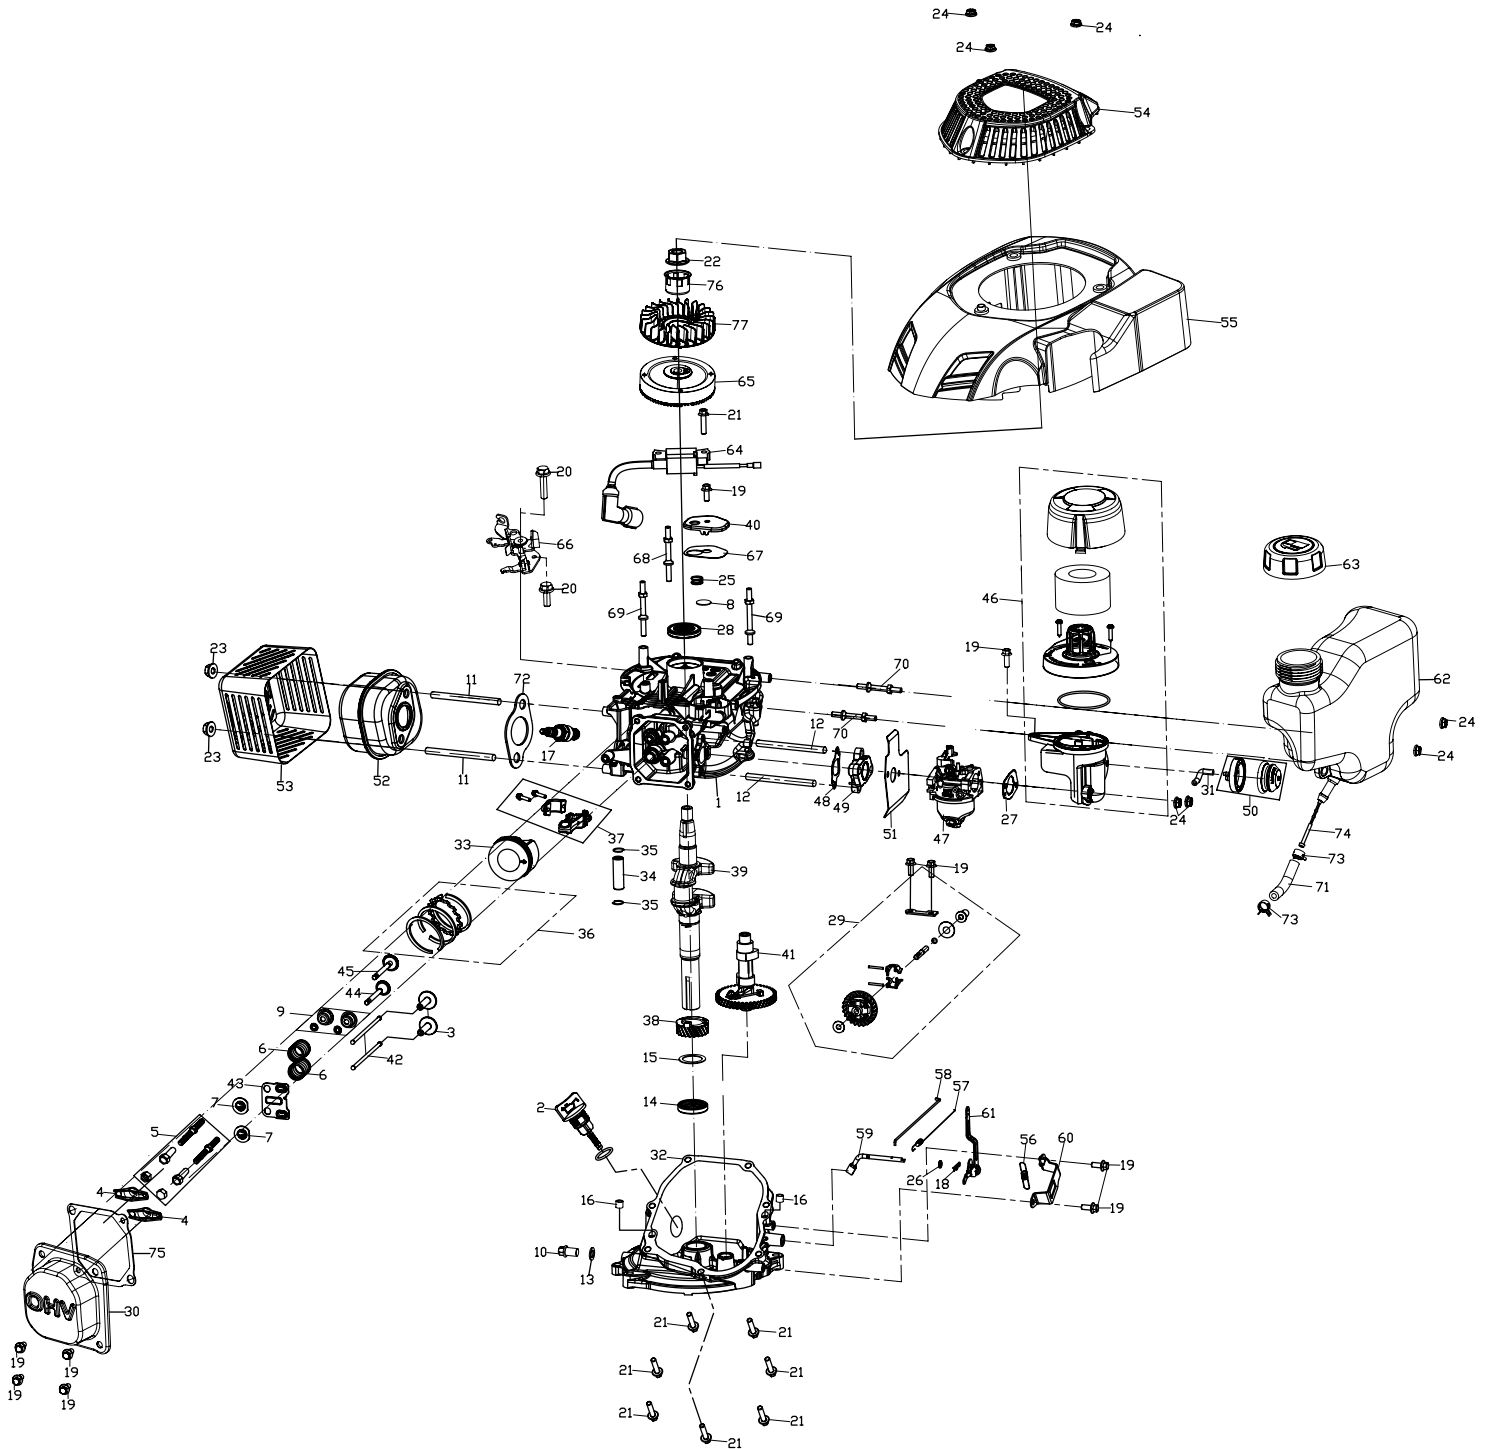

SELF PROPELLED PETROL LAWN MOWER


08672 – LMP460 SPARE PARTS LISTING

KEY No.	PART No.	STOCK No.	DESCRIPTION	KEY No.	PART No.	STOCK No.	DESCRIPTION
1	Y-LMP390-1E		The crankshaft box body	42	Y-LMP390-42E	56509	Valve push rod
2	Y-LMP390-2E	54584	Oil gauge assembly	43	Y-LMP390-43E	56510	Limit plate assembly
3	Y-LMP390-3E	54586	Valve lifter	44	Y-LMP390-44E	56511	Inlet valve
4	Y-LMP390-4E	54610	Rocker arm	45	Y-LMP390-45E	56512	Exhaust valve
5	Y-LMP390-5E	54723	Rocker arm fastening bolt assembly	47	Y-LMP390-47E	56514	Carburetor assembly
6	Y-LMP390-6E	54986	Valve springs	48	Y-LMP390-48E	56515	Intake gasket
7	Y-LMP390-7E	54987	Inlet valve spring seat	49	Y-LMP390-49E	56516	Carburetor connection block
8	Y-LMP390-8E	55084	Circular plate	50	Y-LMP390-50E	56517	Add pump
9	Y-LMP390-9E	55085	Valve oil seal	51	Y-LMP390-51E	56518	Carburetor gasket
10	Y-LMP390-10E	55438	Oil drain bolt m10x1.25X15	52	Y-LMP390-52E	56520	Muffler
11	Y-LMP390-11E	55442	Stud m6x77	53	Y-LMP390-53E	56521	Muffler housing
12	Y-LMP390-12E	55446	Stud m6x100	54	Y-LMP390-54E	56522	Start the tray assembly
13	Y-LMP390-13E	55450	Oil drain bolt washer	55	Y-LMP390-55E	56523	In the hood
14	Y-LMP390-14E	55455	Crankshaft oil seal	56	Y-LMP390-56E	56524	Speed regulating spring b
15	Y-LMP390-15E	55456	Crankshaft flat mat	57	Y-LMP390-57E	56525	Vernier c spring
16	Y-LMP390-16E	55515	Positioning pin of crankcase	58	Y-LMP390-58E	56526	Throttle lever
17	Y-LMP390-17E	56106	Spark plug	59	Y-LMP390-59E	56527	Swinging rod
18	Y-LMP390-18E	56114	Check back clip	60	Y-LMP390-60E	56529	Speed control controller
19	Y-LMP390-19E	56116	Bolt m6x16	61	Y-LMP390-61E	56531	Control arm
20	Y-LMP390-20E	56117	Bolt m6x18	62	Y-LMP390-62E	56532	Fuel tank
21	Y-LMP390-21E	56192	Bolt m6x25	63	Y-LMP390-63E	56533	Cap
22	Y-LMP390-22E	56193	Nut m12x1. 25	64	Y-LMP390-64E	56536	Igniter
23	Y-LMP390-23E	56196	Nut m6	65	Y-LMP390-65E	56537	Flywheel components
24	Y-LMP390-24E	56449	Nut m6	66	Y-LMP390-66E	56538	Brake components
25	Y-LMP390-25E	56451	Breathing valve spring	67	Y-LMP390-67E	56539	Oil return chamber cover gasket
26	Y-LMP390-26E	56452	Pendulum stem seal	68	Y-LMP390-68E	56540	Start cover stud
27	Y-LMP390-27E	56453	Air filter gasket	69	Y-LMP390-69E	56541	Start cover stud
28	Y-LMP390-28E	56468	Crankshaft oil seal	70	Y-LMP390-70E	56543	Tank stud
29	Y-LMP390-29E	56470	Centrifugal governor gear assembly	71	Y-LMP390-71E	56544	Fuel pipe
30	Y-LMP390-30E	56471	Cylinder cranium	72	Y-LMP390-72E	56545	Exhaust gasket
31	Y-LMP390-31E	56472	Exhaust pipe	73	Y-LMP390-73E	56546	Fuel pipe clamp
32	Y-LMP390-32E	56499	Crankcase cover	74	Y-LMP390-74E	56547	Filter
33	Y-LMP390-33E	56500	Piston	75	Y-LMP390-75E	56551	Cylinder head cover gasket
34	Y-LMP390-34E	56501	Piston pin	76	Y-LMP390-76E	56552	Start the cup
35	Y-LMP390-35E	56502	Piston pin retainer	77	Y-LMP390-77E	56554	The impeller
36	Y-LMP390-36E	56503	Piston ring assembly				
37	Y-LMP390-37E	56504	Connecting rod component				
38	Y-LMP390-38E	56505	Crankshaft timing driving gear				
39	Y-LMP390-39E	56506	The crankshaft				
40	Y-LMP390-40E	56507	Back to the oil chamber				
41	Y-LMP390-41E	56508	Camshaft assembly				



SELF PROPELLED PETROL LAWN MOWER

08672 – LMP460 SPARE PARTS DRAWING

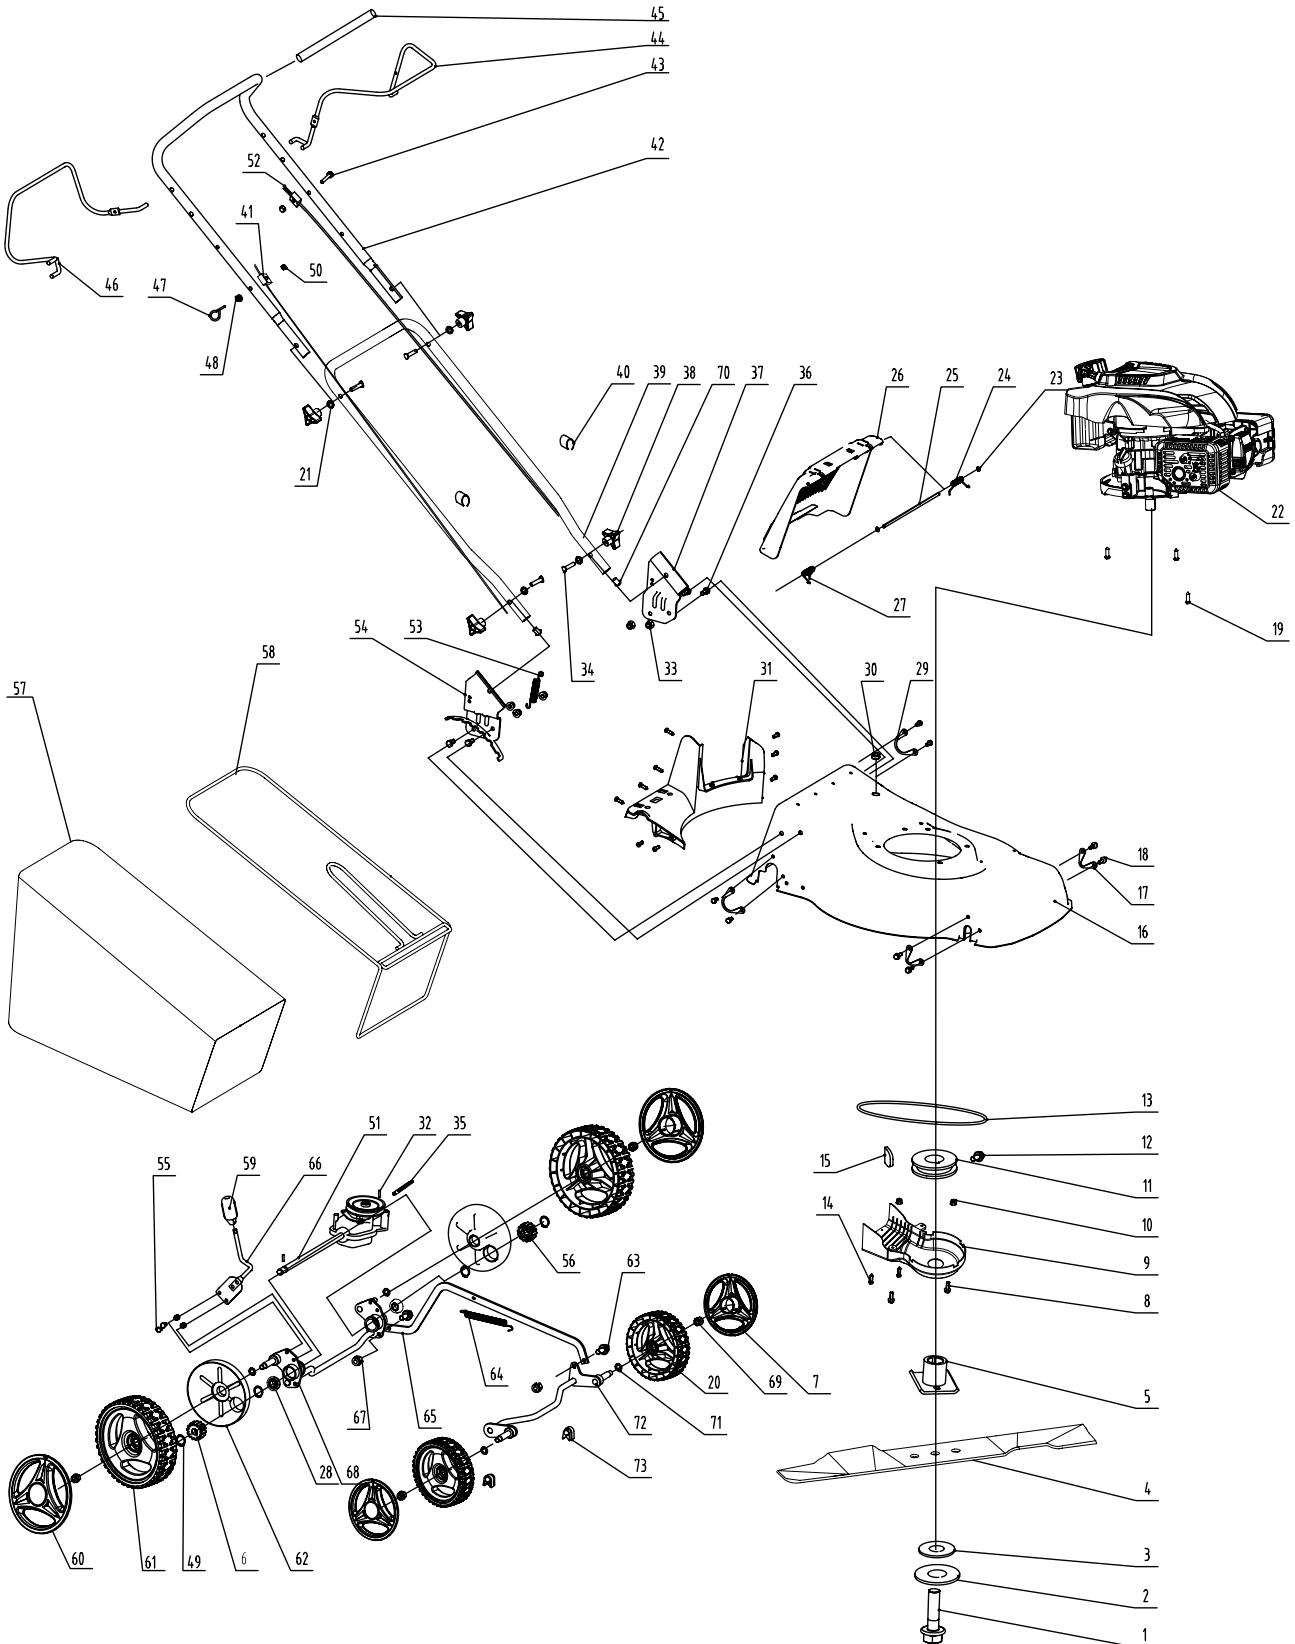

SELF PROPELLED PETROL LAWN MOWER

08672 – LMP460 SPARE PARTS LISTING

KEY No.	PART No.	STOCK No.	DESCRIPTION
1	Y-LMP460-01D	53593	Bolt 3/8-24unfx38
2	Y-LMP460-02D	53594	Flat washer
3	Y-LMP460-03D	53595	Blade washer
4	Y-LMP460-04D	53596	Blade
5	Y-LMP460-05D	53597	Blade adapter
6	Y-LMP460-06D	53598	Right gear assy
7	Y-LMP460-07D	53599	Wheel cover
8	Y-LMP460-08D	53600	Bolt m6x16
9	Y-LMP460-09D	53601	Belt cover
10	Y-LMP460-10D	53602	Bolt m6
11	Y-LMP460-11D	53603	Initiative pulley
12	Y-LMP460-12D	53604	Bolt m6x8
13	Y-LMP460-13D	53605	Belt vz762
14	Y-LMP460-14D	53606	Screw kal50x12
15	Y-LMP460-15D	53607	Key
16	Y-LMP460-16D	53608	Deck
17	Y-LMP460-17D	53610	Front axle plank
18	Y-LMP460-18D	53612	Screw m6x12
19	Y-LMP460-19D	53613	Screw
20	Y-LMP460-20D	53614	Front wheel
21	Y-LMP460-21D	53615	Washer
22	Y-LMP460-22D	53616	Engine dvo150
23	Y-LMP460-23D	53618	Circlip
24	Y-LMP460-24D	53619	Torsional spring (L)
25	Y-LMP460-25D	53620	Axle(rear cover)
26	Y-LMP460-26D	53622	Rear cover
27	Y-LMP460-27D	53623	Torsional spring (R)
28	Y-LMP460-28D	53624	Ball bearing
29	Y-LMP460-29D	53626	Rear axle plank
30	Y-LMP460-30D	53627	Cable protection pipe
31	Y-LMP460-31D	53628	Back panel
32	Y-LMP460-32D	53629	Transmission gear pin
33	Y-LMP460-33D	53630	Bolt m8
34	Y-LMP460-34D	53631	Bolt
35	Y-LMP460-35D	53632	Clip wire harness
36	Y-LMP460-36D	53634	Bolt m8x20
37	Y-LMP460-37D	53635	Left handle support
38	Y-LMP460-38D	53636	Triangle knob
39	Y-LMP460-39D	53637	Lower handle
40	Y-LMP460-40D	53638	Clip

KEY No.	PART No.	STOCK No.	DESCRIPTION
41	Y-LMP460-41D	53639	Stall lasso
42	Y-LMP460-42D	53640	Upper handle
43	Y-LMP460-43D	53642	Bolt
44	Y-LMP460-44D	53643	Brake level
45	Y-LMP460-45D	53868	Soft grip
46	Y-LMP460-46D	53869	Clutch level
47	Y-LMP460-47D	53870	Rope guide support
48	Y-LMP460-48D	53872	Bolt m6
49	Y-LMP460-49D	53874	Circlip
50	Y-LMP460-50D	53877	Nut
51	Y-LMP460-51D	53879	Gear box
52	Y-LMP460-52D	53885	Drive the lasso
53	Y-LMP460-53D	53891	Spring
54	Y-LMP460-54D	53893	Right handle support
55	Y-LMP460-55D	53897	Bolt gb5783 m6x14
56	Y-LMP460-56D	53901	Left gear assy
57	Y-LMP460-57D	53907	Clippings bag
58	Y-LMP460-58D	53911	Straw bag hplder
59	Y-LMP460-59D	53914	Height adjuster cover
60	Y-LMP460-60D	53915	Wheel cover
61	Y-LMP460-61D	53917	Rear wheel
62	Y-LMP460-62D	53919	Inner wheel cover
63	Y-LMP460-63D	53922	Fixed bolt
64	Y-LMP460-64D	53923	Height adjuster spring
65	Y-LMP460-65D	54238	Height adjustment link bar
66	Y-LMP460-66D	54369	Height-adjusting handle bar assembly
67	Y-LMP460-67D	54381	Nut m6
68	Y-LMP460-68D	54382	Rear axle
69	Y-LMP460-69D	54383	Nut m10
70	Y-LMP460-70D	54390	Lower push rod plug
71	Y-LMP460-71D	54397	Flat washer
72	Y-LMP460-72D	54498	Front axle
73	Y-LMP460-73D	54577	Hold hoop