




230V

CHAINSAW

70279 – GCS1800D SPARE PARTS DRAWING

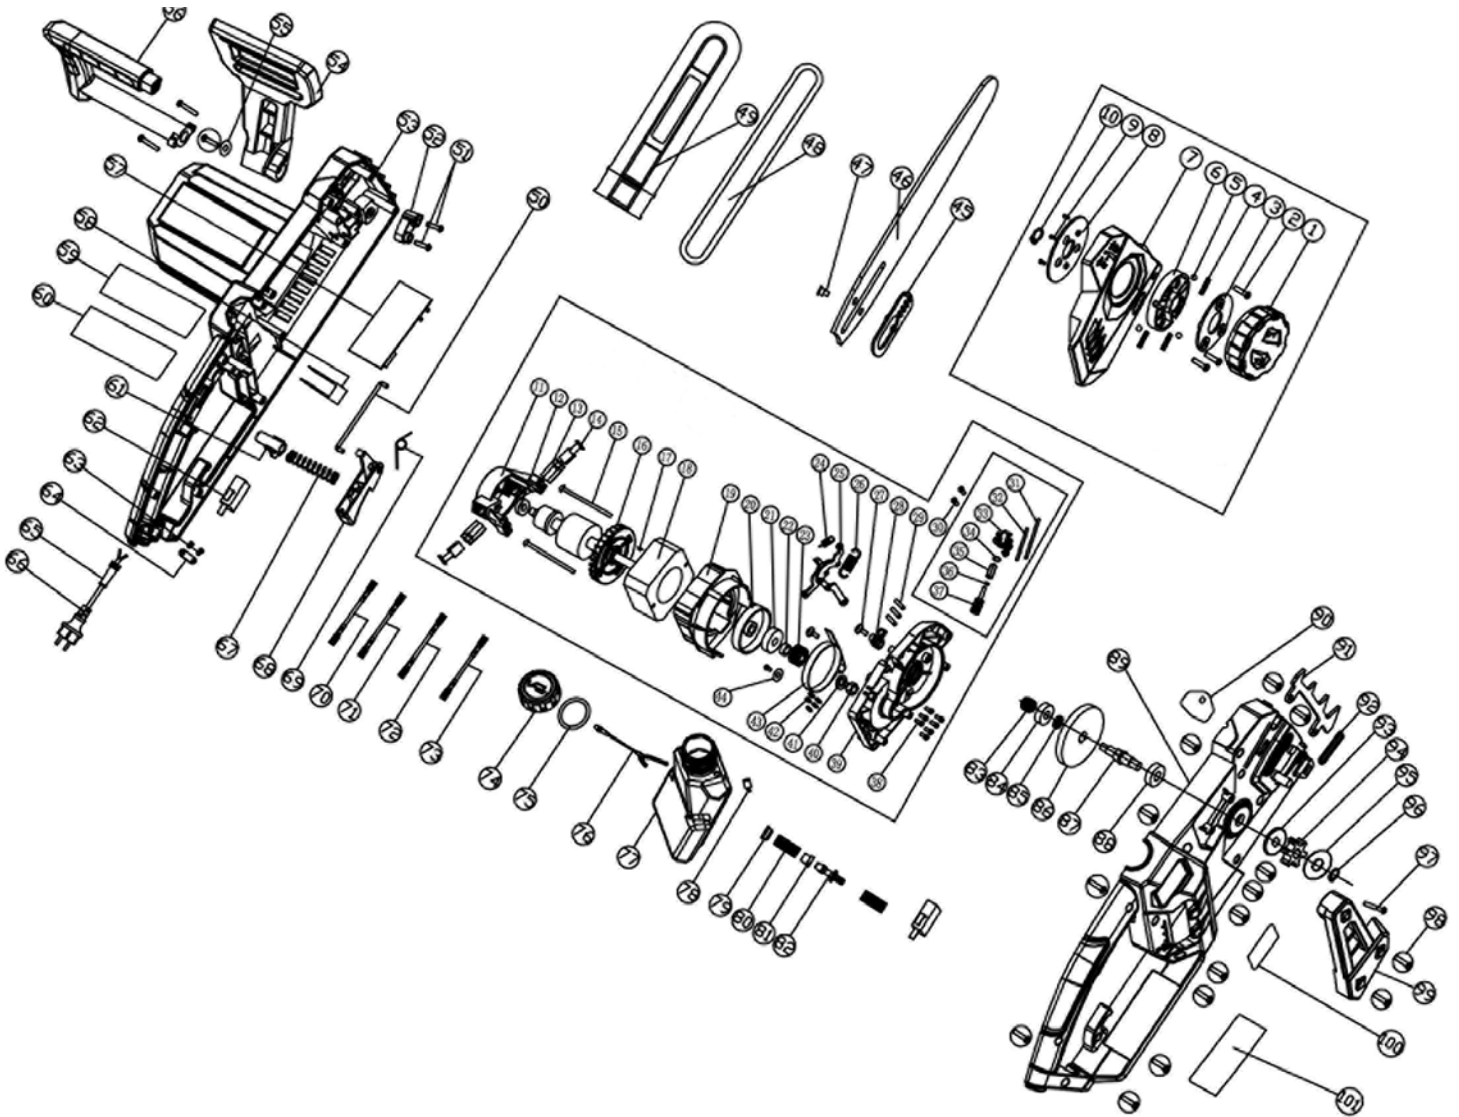



230V

CHAINSAW

70279 – GCS1800D SPARE PARTS LISTING

KEY No.	PART No.	STOCK No.	DESCRIPTION
1	Y-GCS1800D-1A	52564	Chain gear assembly
2			
3			
4			
5			
6			
7			
8			
9			
10			
11	Y-GCS1800D-14A	52565	Carbon brush assembly (Pair)
13			
14			
19			(NP) Wind screen
12	Y-GCS1800D-16A	52566	Armature assembly
15			
18			
16			
17			
20			
21			
22			
23			
40			
41			
30	Y-GCS1800D-30	52567	Screw
31	Y-GCS1800D-37A	52568	Oil pump assembly
32			
33			
34			
35			
36			
37			

KEY No.	PART No.	STOCK No.	DESCRIPTION
24	Y-GCS1800D-39A	52569	Motor support assembly
25			
26			
27			
28			
29			
39			
38			
42	Y-GCS1800D-42	52571	Rubber cork
43	Y-GCS1800D-43	52572	Brake belt
44	Y-GCS1800D-44	52573	Washer
45	Y-GCS1800D-45A	53555	Regulating plate assembly
47			
46	Y-GCS1800D-46	53556	Guide bar
48	Y-GCS1800D-48	53557	Saw chain
49	Y-GCS1800D-49	53558	Blade cover
50			(NP) Pull rod
51	Y-GCS1800D-53A	53559	Left hand assembly
52			
53			
67			
69			
68			
54	Y-GCS1800D-56A	53560	Handle assembly
55			
56			
57	Y-GCS1800D-57	53561	PCB
58	Y-GCS1800D-58	53562	Capacitor
59			(NP) Brand label
60			(NP) Label
61	Y-GCS1800D-61	53563	Switch side button
62	Y-GCS1800D-62	53564	Microswitch
63	Y-GCS1800D-66A	53565	Power cable assembly
64			
65			
66			

