


AIR IMPACT WRENCH

83745 / 83985 SPARE PARTS LISTING

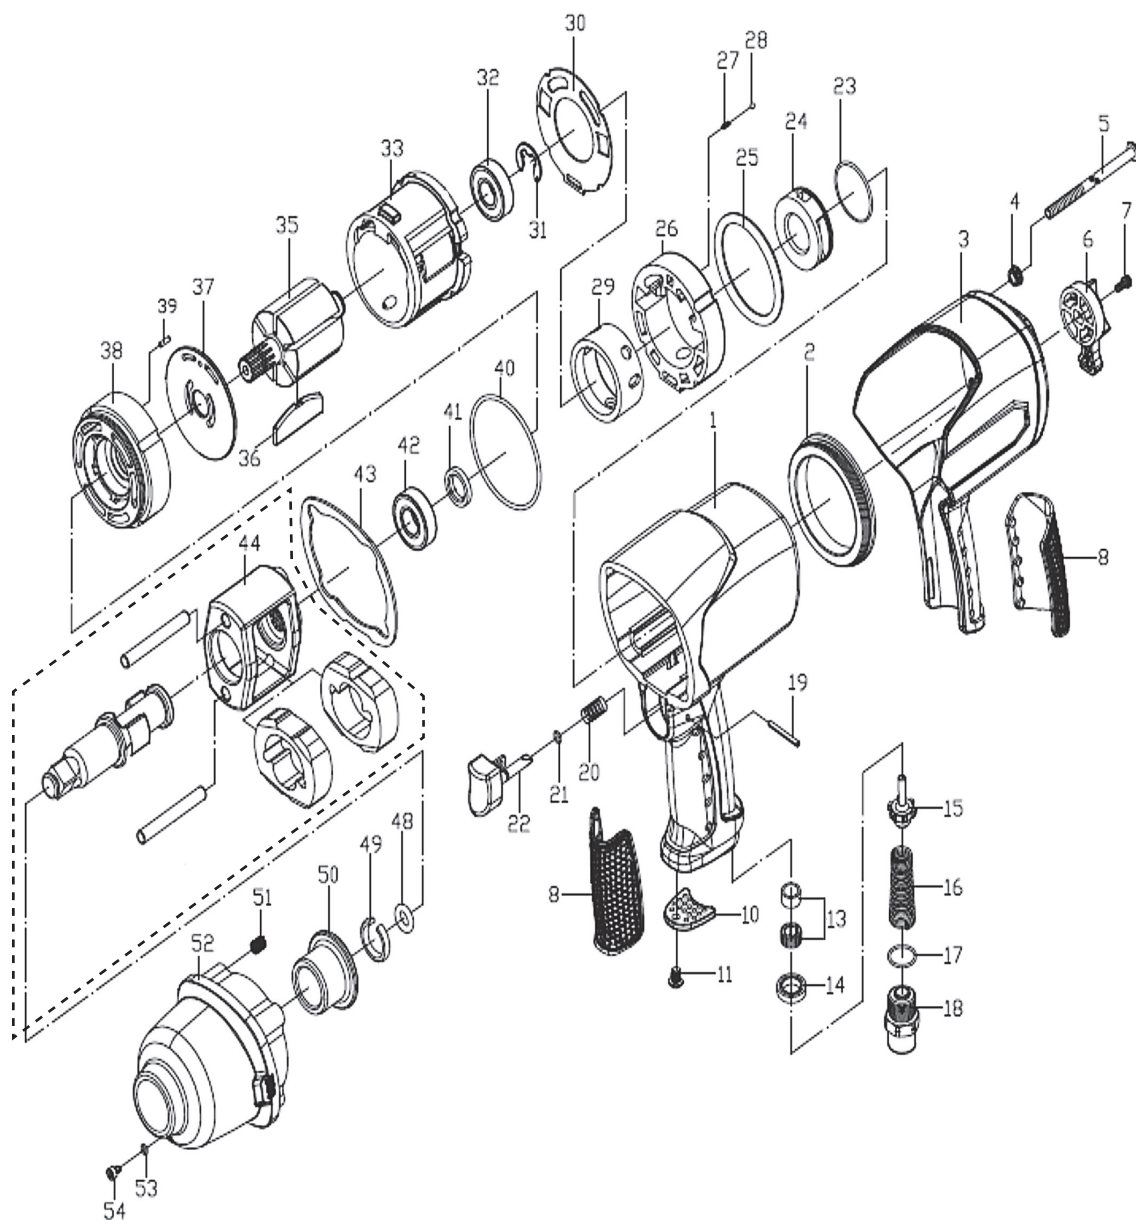

KEY No.	PART No.	STOCK No.	DESCRIPTION
1	YDAT-AIW12-1	00109	Housing
2	YDAT-AIW12-2	00110	Bush
3	YDAT-AIW12-3	00112	Housing Cover
4	YDAT-AIW12-4	00113	Bush
5	YDAT-AIW12-5	00114	Set Screw
6	YDAT-AIW12-6	00115	Switch
7	YDAT-AIW12-7	00116	Screw
8	YDAT-AIW12-8	00117	Soft Grip Set

KEY No.	PART No.	STOCK No.	DESCRIPTION
10	YDAT-AIW12-10	00119	Muffler
11	YDAT-AIW12-11	00120	Screw
13	YDAT-AIW12-13	00122	Screw
14	YDAT-AIW12-14	00123	Oil Seal
15	YDAT-AIW12-15	00124	Throttle Valve
16	YDAT-AIW12-16	00125	Spring
17	YDAT-AIW12-17	00126	O-Ring
18	YDAT-AIW12-18	00127	Air Inlet



AIR IMPACT WRENCH

83745 / 83985 SPARE PARTS LISTING

KEY No.	PART No.	STOCK No.	DESCRIPTION
19	YDAT-AIW12-19	00128	Pin
20	YDAT-AIW12-20	00130	Spring
21	YDAT-AIW12-21	00131	O-Ring
22	YDAT-AIW12-22	00132	Trigger
23	YDAT-AIW12-23	00133	O-Ring
24	YDAT-AIW12-24	00134	Air Flow Regulator
25	YDAT-AIW12-25	00135	Gasket
26	YDAT-AIW12-26	00136	Valve Seat
27	YDAT-AIW12-27	00138	Spring
28	YDAT-AIW12-28	00139	Steel Ball
29	YDAT-AIW12-29	00140	Bush
30	YDAT-AIW12-30	00141	Gasket
31	YDAT-AIW12-31	00142	Retainer Ring
32	YDAT-AIW12-32	00143	Bearing
33	YDAT-AIW12-33	00144	Cylinder & Steel Ball
35	YDAT-AIW12-35	00147	Rotor

KEY No.	PART No.	STOCK No.	DESCRIPTION
36	YDAT-AIW12-36	00148	Rotor Blade
37	YDAT-AIW12-37	00149	Washer
38	YDAT-AIW12-38	00150	Front Plate
39	YDAT-AIW12-39	00151	Pin
40	YDAT-AIW12-40	00152	O-Ring
41	YDAT-AIW12-41	00154	Oil Seal
42	YDAT-AIW12-42	00155	Bearing
43	YDAT-AIW12-43	00156	Gasket
44	YDAT-AIW12-44	00157	Hammer Kit
48	YDAT-AIW12-48	01091	O-Ring
49	YDAT-AIW12-49	01092	Retainer
50	YDAT-AIW12-50	00162	Anvil Bush
51	YDAT-AIW12-51	00163	Screw
52	YDAT-AIW12-52	00164	Protector Cover
53	YDAT-AIW12-53	00165	O-Ring
54	YDAT-AIW12-54	00166	Screw