




85L/MIN, 2.5HP PETROL WATER PUMP

87680 - PWP27 SPARE PARTS DRAWING

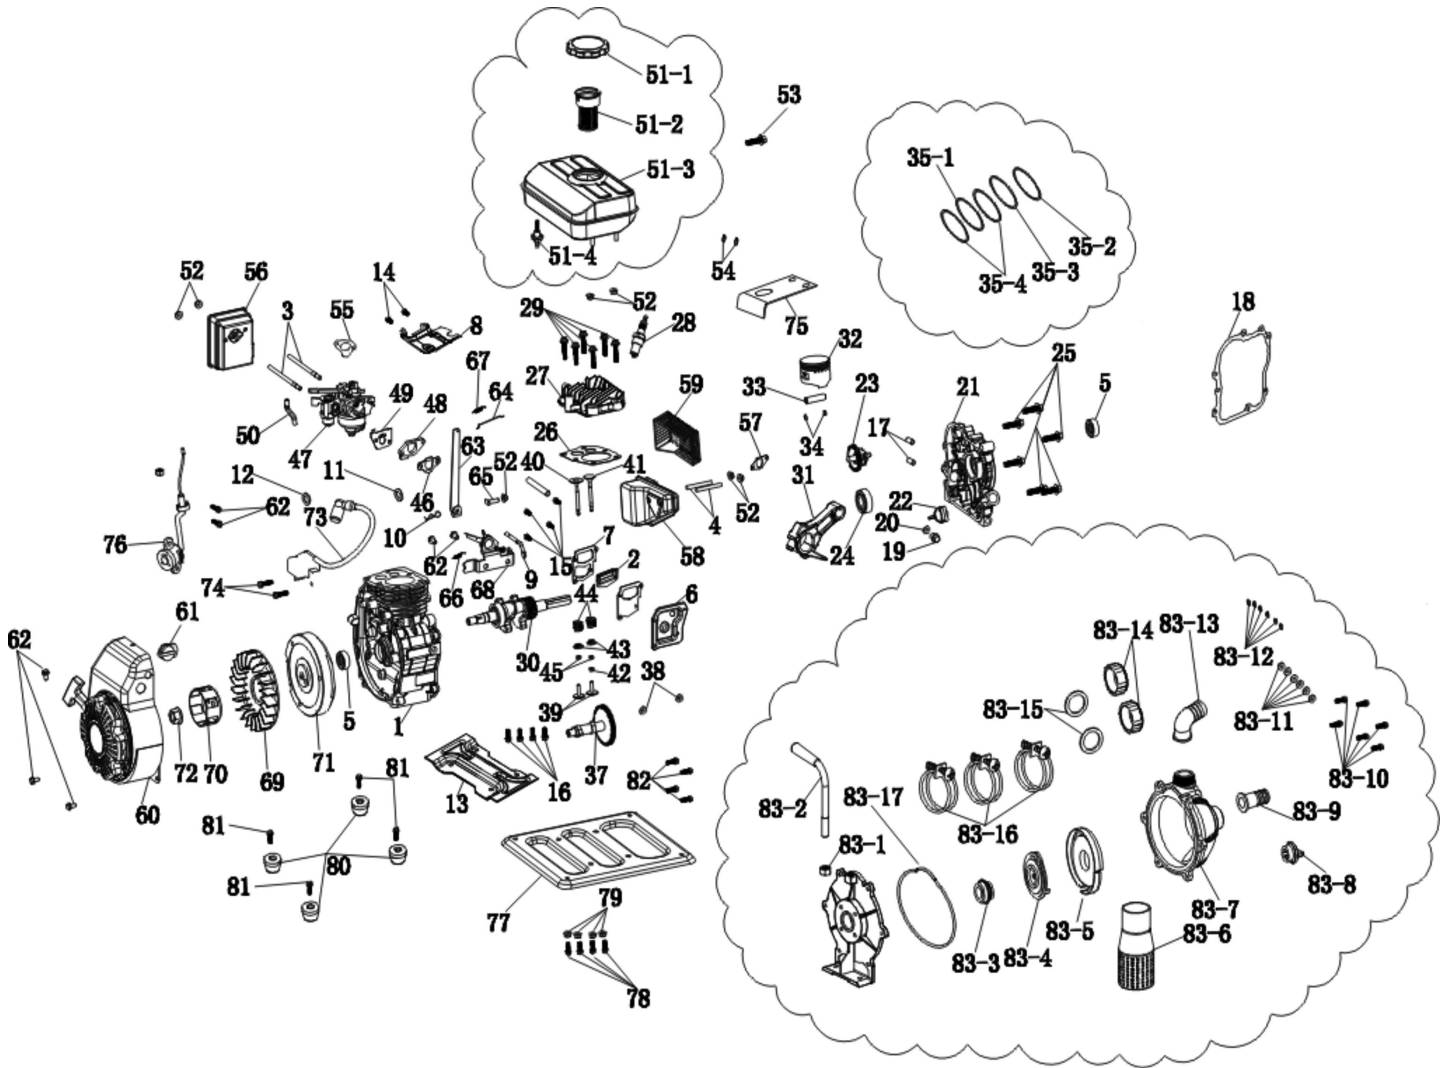



85L/MIN, 2.5HP PETROL

WATER PUMP**87680 - PWP27 SPARE PARTS DRAWING**

Key No.	Part No.	Stock No.	Description	Key No.	Part No.	Stock No.	Description
1	Y-PWP27-01	15921	Crankcase assembly	39	Y-PWP27-39	15969	Tappet
2	Y-PWP27-02	15922	Clapboard	40	Y-PWP27-40	15970	Exhaust valve
3	Y-PWP27-03	15923	Bolt	41	Y-PWP27-41	15971	Intake valve
4	Y-PWP27-04	15924	Bolt	42	Y-PWP27-42	15972	Oil drip pan
5	Y-PWP27-05	15925	Seal	43	Y-PWP27-43	15973	Valve spring seat
6	Y-PWP27-06	15926	Oil filter cover	44	Y-PWP27-44	15974	Valve spring
7	Y-PWP27-07	15927	Sealing gasket	45	Y-PWP27-45	15975	Valve cap
8	Y-PWP27-08	15929	Flow guard lower	46	Y-PWP27-46	15976	Washer
9	Y-PWP27-09	15930	Sway bar	47	Y-PWP27-47	15977	Carburettor
10	Y-PWP27-10	15931	Keeper	48	Y-PWP27-48	15979	Connecting block
11	Y-PWP27-11	15935	Keeper seal	49	Y-PWP27-49	15980	Washer
12	Y-PWP27-12	15937	Washer	50	Y-PWP27-50	15981	Fuel pipe
13	Y-PWP27-13	15938	Baseboard	51-1	Y-PWP27-51-1	15982	Fuel tank cap
14	Y-PWP27-14	15939	Bolt	51-2	Y-PWP27-51-2	15983	Filter
15	Y-PWP27-15	15940	Bolt	51-3	Y-PWP27-51-3	15984	Fuel tank
16	Y-PWP27-16	15941	Bolt	51-4	Y-PWP27-51-4	15985	Oil outlet hose
17	Y-PWP27-17	15942	Pin	52	Y-PWP27-52	15987	Nut
18	Y-PWP27-18	15943	Gasket	53	Y-PWP27-53	15988	Bolt
19	Y-PWP27-19	15945	Bolt	54	Y-PWP27-54	15989	Pipe clamp
20	Y-PWP27-20	15946	Washer	55	Y-PWP27-55	15990	Washer
21	Y-PWP27-21	15947	Crankcase cover	56	Y-PWP27-56	15991	Air cleaner
22	Y-PWP27-22	15948	Dipstick	57	Y-PWP27-57	15992	Washer
23	Y-PWP27-23	15949	Driven gear sub assembly	58	Y-PWP27-58	15993	Muffler
24	Y-PWP27-24	15950	Bearing 6203	59	Y-PWP27-59	15995	Muffler hood
25	Y-PWP27-25	15951	Bolt	60	Y-PWP27-60	15996	Recoil starter assembly
26	Y-PWP27-26	15953	Gasket	61	Y-PWP27-61	15997	Ignition key
27	Y-PWP27-27	15954	Cylinder cover	62	Y-PWP27-62	15998	Bolt
28	Y-PWP27-28	15955	Spark plug	63	Y-PWP27-63	15999	Speed regulating arm
29	Y-PWP27-29	15956	Bolt	64	Y-PWP27-64	16000	Pulling rod
30	Y-PWP27-30	15957	Crankshaft assembly	65	Y-PWP27-65	16001	Bolt
31	Y-PWP27-31	15958	Connecting rod	66	Y-PWP27-66	16002	Back spring
32	Y-PWP27-32	15959	Piston	67	Y-PWP27-67	16003	Governor assistant spring
33	Y-PWP27-33	15961	Piston pin	68	Y-PWP27-68	16004	Governor mount
34	Y-PWP27-34	15962	Pin circlip	69	Y-PWP27-69	16005	Flywheel fan
35-1	Y-PWP27-35-1	15963	Oil ring	70	Y-PWP27-70	16007	Starting cup
35-2	Y-PWP27-35-2	15964	Ring 1	71	Y-PWP27-71	16008	Flywheel
35-3	Y-PWP27-35-3	15965	Ring 2	72	Y-PWP27-72	16010	Nut
35-4	Y-PWP27-35-4	15966	Scraping ring	73	Y-PWP27-73	16011	Ignition coil
37	Y-PWP27-37	15967	Camshaft	74	Y-PWP27-74	16012	Bolt
38	Y-PWP27-38	15968	Camshaft washer	75	Y-PWP27-75	16013	Shield

