


2 TONNE TROLLEY JACK

03461 - TJ2LR SPARE PARTS DRAWING

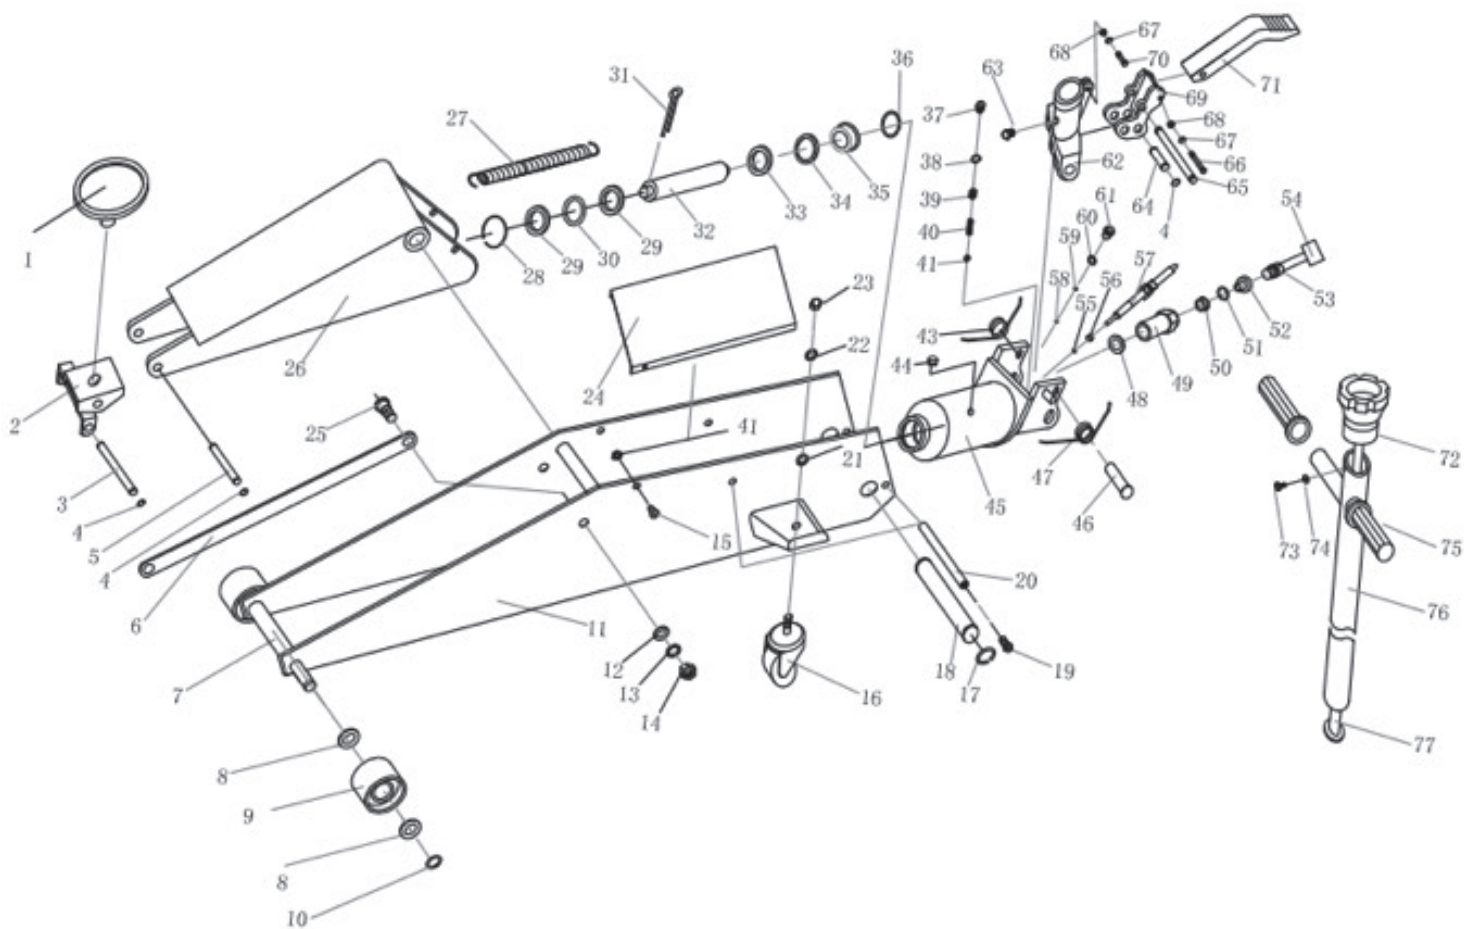



2 TONNE TROLLEY JACK

03461 - TJ2LR SPARE PARTS LISTING

KEY No.	PART No.	STOCK No.	DESCRIPTION	KEY No.	PART No.	STOCK No.	DESCRIPTION
1	YTJ2LR-1	47114	Saddle	42	YTJ2LR-42	48363	M5 Screw
2	YTJ2LR-2	47115	Bracket	43	YTJ2LR-43	48364	Right Torsional Spring
3	YTJ2LR-3	47118	Bracket Axle Pin	44	YTJ2LR-44	48365	Oil Cap
4	YTJ2LR-4	47120	Check Ring	45	YTJ2LR-45	48366	Cylinder
5	YTJ2LR-5	47121	Pitman Shaft	46	YTJ2LR-46	48416	Pin
6	YTJ2LR-6	47122	Connecting Bar	47	YTJ2LR-47	48419	Left Torsional Spring
7	YTJ2LR-7	47125	Front Axle	48	YTJ2LR-48	48427	Metal Pad
8	YTJ2LR-8	47128	Washer	49	YTJ2LR-49	48436	Pump Body
9	YTJ2LR-9	47130	Front Wheel	50	YTJ2LR-50	48452	Collar
10	YTJ2LR-10	47134	Spring Collar	51	YTJ2LR-51	48539	O-Ring
11	YTJ2LR-11	47136	Chassis	52	YTJ2LR-52	48568	Seal
12	YTJ2LR-12	47137	Washer	53	YTJ2LR-53	48571	Pump Core
13	YTJ2LR-13	47145	Lock Washer	54	YTJ2LR-54	48572	Pump Core Parts
14	YTJ2LR-14	47404	M16 Nut	55	YTJ2LR-55	48574	Ball
15	YTJ2LR-15	47405	Screw	56	YTJ2LR-56	48584	Oil Seal
16	YTJ2LR-16	47406	Castor	57	YTJ2LR-57	48588	Unloading Valve
17	YTJ2LR-17	47407	Check Ring	58	YTJ2LR-58	48589	Ball
18	YTJ2LR-18	47408	Pin	59	YTJ2LR-59	48596	Ball
19	YTJ2LR-19	47409	M10 Screw	60	YTJ2LR-60	48653	Metal Pad
20	YTJ2LR-20	47410	Fixed Pin	61	YTJ2LR-61	48655	High Pressure Screw
21	YTJ2LR-21	47411	Washer	62	YTJ2LR-62	48660	Piston Crank
22	YTJ2LR-22	47412	Lock Washer	63	YTJ2LR-63	48662	M8x16 Bolt
23	YTJ2LR-23	47413	M12 Nut	64	YTJ2LR-64	48663	Pin
24	YTJ2LR-24	47559	Top Plate	65	YTJ2LR-65	48664	Pin
25	YTJ2LR-25	47588	Connection Screw	66	YTJ2LR-66	48665	M8x60 Bolt
26	YTJ2LR-26	47629	Lift Arm	67	YTJ2LR-67	48666	Washer
27	YTJ2LR-27	47631	Spring	68	YTJ2LR-68	48672	M8 Nut
28	YTJ2LR-28	47641	Check Ring	69	YTJ2LR-69	48673	Pedal Link
29	YTJ2LR-29	47642	Spacer Sleeve	70	YTJ2LR70	48676	M8x16 Bolt
30	YTJ2LR-30	47963	O-Ring	71	YTJ2LR-71	48705	Foot Pedal
31	YTJ2LR-31	48088	R-Pin	72	YTJ2LR-72	48729	Release Screw
32	YTJ2LR-32	48090	Piston Rod	73	YTJ2LR-73	48730	Screw
33	YTJ2LR-33	48227	Spacer Sleeve	74	YTJ2LR-74	48789	Washer
34	YTJ2LR-34	48284	Nylon Ring	75	YTJ2LR-75	48792	Handle Grip
35	YTJ2LR-35	48285	Collar	76	YTJ2LR-76	48826	Handle
36	YTJ2LR-36	48292	Check Ring	77	YTJ2LR-77	48827	Mandrel
37	YTJ2LR-37	48293	Screw	78	YTJ2LR-78	48828	Complete Pump Assy (Part 28-61, without 43, 46, 47)
38	YTJ2LR-38	48295	O-Ring				
39	YTJ2LR-39	48337	Screw				
40	YTJ2LR-40	48360	Press Spring				
41	YTJ2LR-41	48362	Cone Valve				