


To make assembly easier we recommend having two persons aid one another.

Stock No. **28499**
Part No. **MS400-1WC54**

FITTING THE WALL CABINET TO A PEGBOARD


STEP 1:

Hang the wall cabinet onto the pegboard.

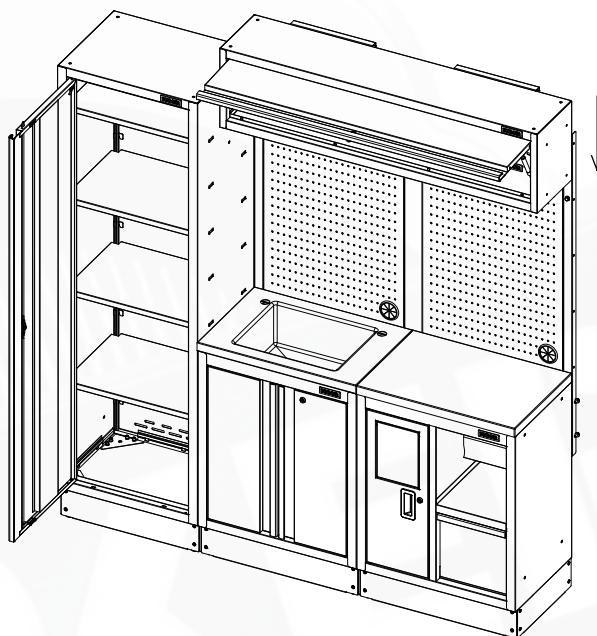

STEP 2:


Connect the side panels of two cabinets with bolt M6 x 16mm and nut M6 and tighten with wrench (not included).

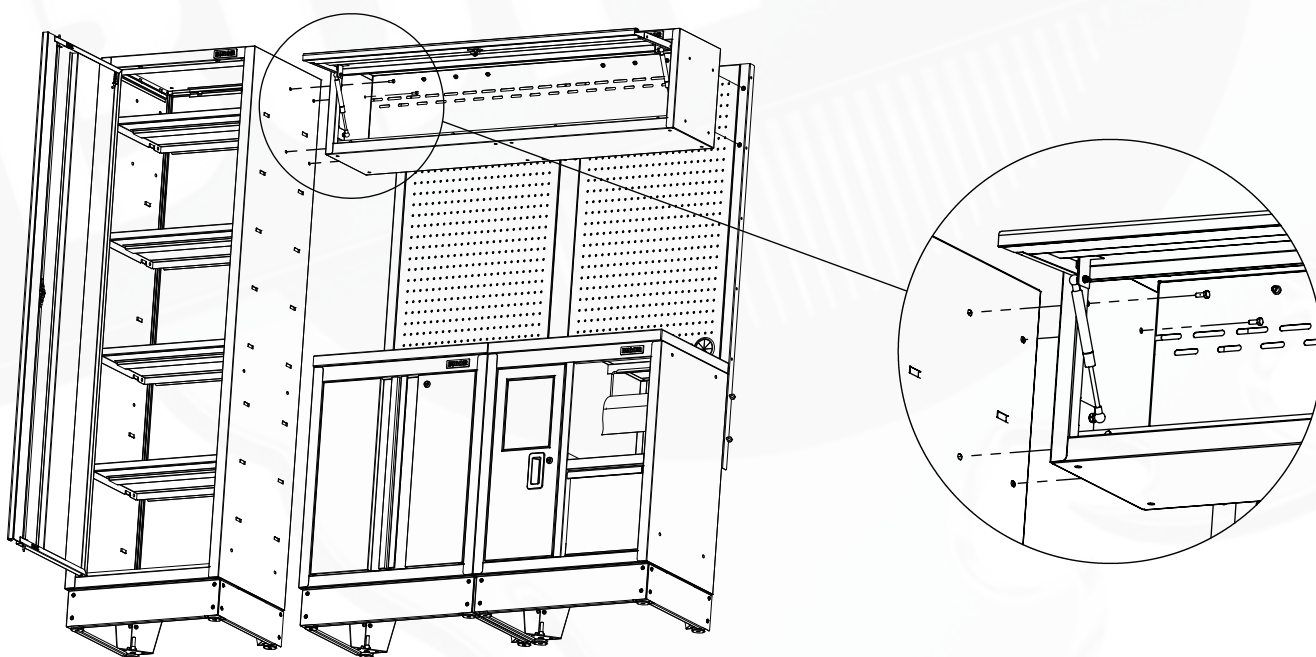

STEP 3:

Attach the wall cabinet to wall brackets with bolt M8 x 16mm, flat washer and spring washer, and tighten with wrench (not included).

Note: Do not fully tighten.

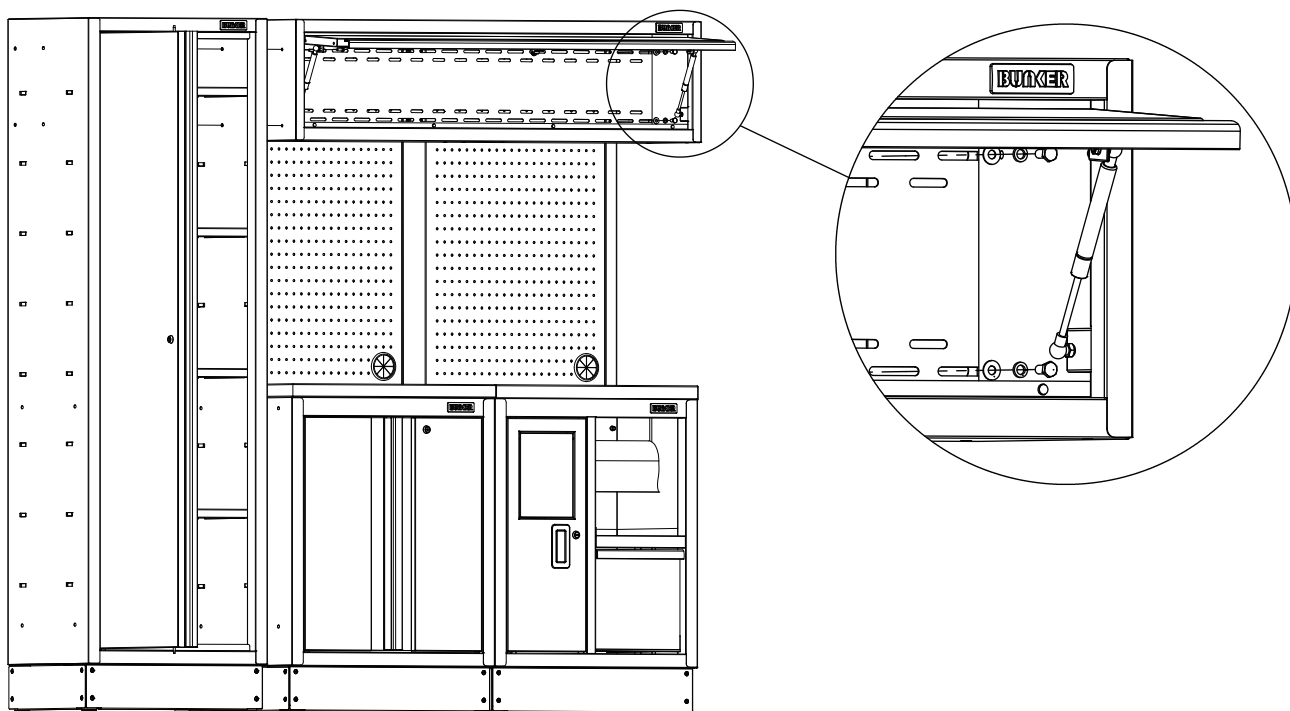

FITTING THE WALL CABINET TO A WALL

- Determine the spacing of the plastic plugs at a desired height.
- Position the wall cabinet on the wall surface, use the holes on back panel to line up and mark the position as per the spacing marked on the pictures below..
- Using a drill bit, drill the holes and insert the four plastic plugs.
- Attach the wall cabinet to the wall with screw ST6.3 x 65mm and tighten with cross slot screwdriver (not included).

Note: Once the wall cabinet is attached to the wall there is no need for a mounting bracket.

