

Stock No: **33212 Corner Back Panel (Pair)**
Stock No: **33201 Corner Wall Cabinet**

There are 2 options for mounting the corner wall cabinet:

- Mount the unit directly to the wall using the screw fixing supplied.
- Mount the unit in conjunction with corner back panels (33212) and wall brackets single (33197) or double (33198). Wall brackets and back panels sold separately.

Stock No: 33201 Corner Wall Cabinet Fixings Supplied	
Description	Qty
Keys	2
Wall Screw Fixings	8
Wall Plugs	8
Mounting Bracket (Step 3)	
Mounting Bracket	2
M6 X 16mm Bolt	6
Use to Attach Corner Wall Cabinet to Wall Brackets (Step 5)	
M8 X 16mm Bolt	8
Flat Washer 18 X 8.5 X 1.2mm	8
Spring Washer 14 X 8.8 X 2.6mm	8
Use to Connect Side Panels to Cabinets	
M6 X 16mm Bolt	8
M6 Nut	8

To make assembly easier we recommend having two persons aid one another.

STEP 1:

Attach wall bracket (single and double)* to corner floor cabinet with bolt M8 x 16mm, washer 18 x 8.5 x 1.2mm and spring washer 14 x 8.8 x 2.6mm. (Note: use fixings supplied with floor cabinet). Tighten with wrench (not included).


STEP 2:

Attach corner unit back panel to wall bracket (single & double)* with bolt M6 x 16mm, nut M6 and flat washer 12 x 6 x 0.8mm. (Note: use fixings supplied with wall bracket). Tighten with wrench (not included).

NOTE:


*Use single wall brackets x 2 (Stock No: 33197) and double wall brackets x 2 (Stock No; 33198) for connecting with other unit back panel.

*Use single wall brackets x 4 (Stock No. 33197) if assembling corner unit alone.

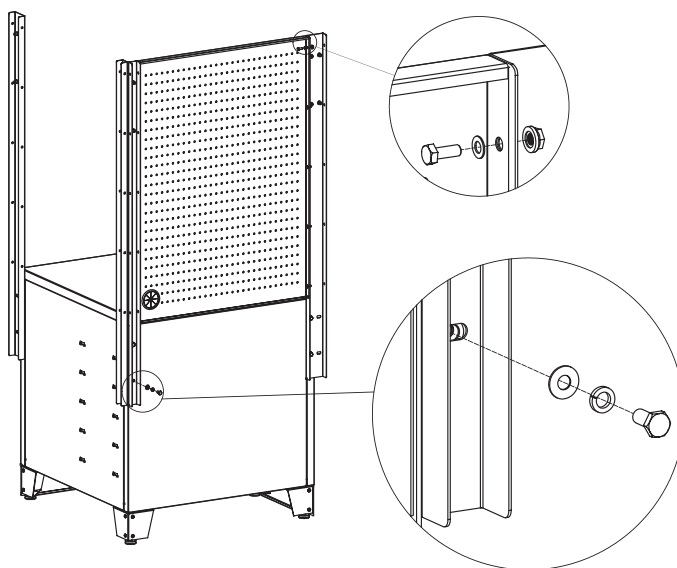


STEP 3:

Attach mounting bracket to back panel of corner wall cabinet with bolt M6 x 16mm and tighten.

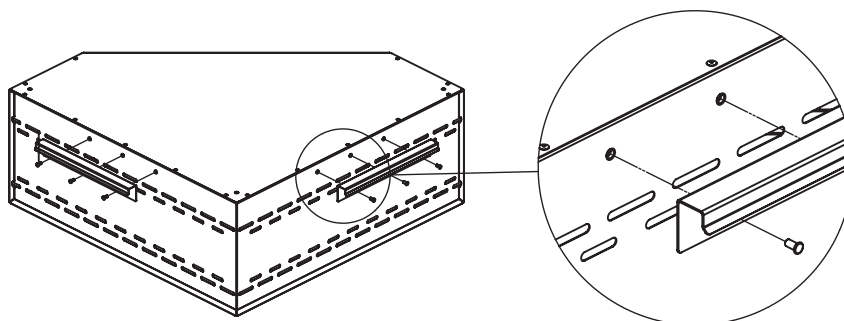


STEP 4:

Hang the corner wall cabinet onto corner unit back panels.

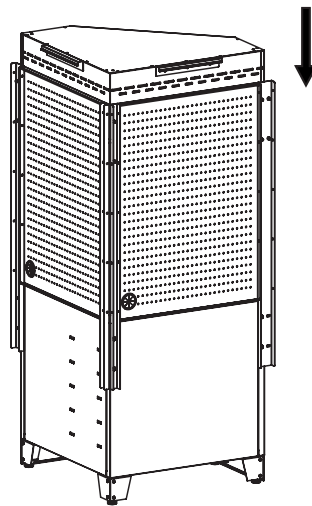

STEP 5:

Attach corner wall cabinet to wall brackets with bolt M8 x 16mm, flat washer 18 x 8.5 x 1.2mm and spring washer 14 x 8.8 x 2.6mm, and tighten with wrench (not included).

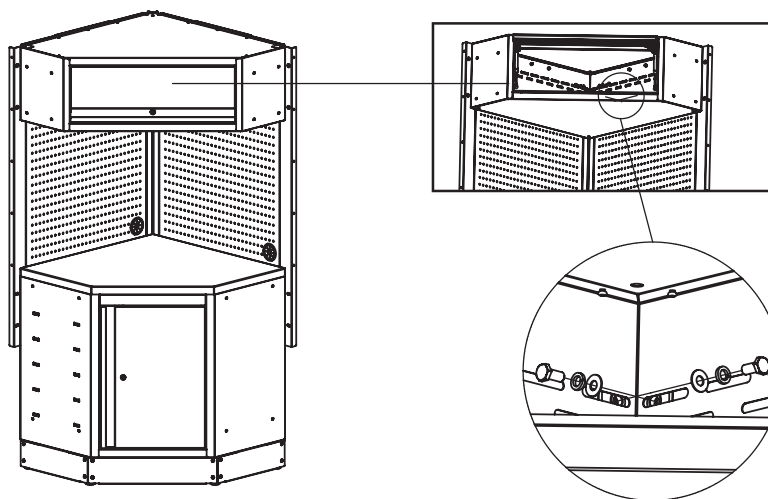

CABINET CONNECTION

Connect the side panels of two cabinets with (4) bolt M6 x 16mm and nut M6, and tighten with wrench (not included).

Note: remove the drawers and open the doors before cabinet connection.

