

DRAPER[®]

3-IN-1 WET & DRY

VACUUM CLEANER

WITH SHAMPOO VALETING

75442



These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

1. INTRODUCTION

(GB)

1.1 SCOPE


This machine is designed to pick up both wet and dry material with the added facility of shampooing.

Part of our core range, this product is suitable for enthusiasts and trades persons alike. Any application other than that it was intended for, is considered misuse.

This product is not a toy and must not be used by children or any person with reduced physical, sensory or mental capabilities or lack of experience and knowledge, or people unfamiliar with these instructions.

Local regulations may restrict the age of the operator.

1.2 UNDERSTANDING THIS MANUALS SAFETY CONTENT:

 **Warning!** – Information that draws attention to the risk of injury or death.

Caution! – Information that draws attention to the risk of damage to the product or surroundings.

1.3 EXPLANATION OF SYMBOLS



Before plugging in your tool, make sure the socket voltage matches that on the product plate. If the socket voltage does not match that shown on the type plate, it can result in a serious hazard and damage to your tool.



Important: Read instruction manuals before operating and servicing this equipment.



For indoor use.
Do not expose to rain.



Tank capacity



Motor capacity (Watts).



Rated voltage



Machine weight.



Hose diameter.



Fully approved power cable



WEEE –

Waste Electrical & Electronic Equipment.

Do not dispose of Waste Electrical & Electronic Equipment in with domestic rubbish.



Class II construction
(Double insulated).

UK Conformity Assessed.

European conformity.

2. SPECIFICATION

(GB)

2.1 SPECIFICATION

Stock no..... 75442

Part noSWD1500

Motor:

Rated voltage230V~

Rated frequency50Hz

Rated input1500W

Insulation class..... Class II (double insulated)

Maximum vacuum pressure18Kpa (180mbar)

Maximum air flow32L/sec

Tank capacity 20L

Fluid capacity 13L

Shampoo tank volume 4L

Sound pressure level 75dB(A)


Dimensions (D x W x H).....400mm x 450mm x 560mm

Machine weight (net)..... 12.5kg

3. HEALTH AND SAFETY INFORMATION

(GB)

3.1 GENERAL SAFETY INSTRUCTIONS FOR POWER TOOL USE

 **Warning!** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tools” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.

b) **Do not operate power tools in explosive**

atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection use for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.**
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for

safe handling and control of the tool in unexpected situations.

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacements parts.** This will ensure that the safety of the power tool is maintained.

3.2 RESIDUAL RISK

Important: Although the safety instructions and operating manuals for our tools contain extensive instructions of safe working with power tools, every power tool involves a certain residual risk which can not be completely excluded by safety mechanisms. Power tools must therefore always be operated with caution!

3.3 CONNECTION TO THE POWER SUPPLY

Caution: Risk of electric shock. Do not open.


This appliance is supplied with an approved plug and cable for your safety.

Never use a damaged or incomplete plug.

This appliance is Class I[†] and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

Carefully select an extension lead. Some machines are not suitable for use with extension leads. If the tool is designed for use outdoors, only use an extension lead suitable for that environment in conjunction with an RCD adaptor. When using an extension lead, select one capable of handling the current (amps) drawn by the machine in use. Ensure the cable is fully unwound regardless of the distance between the power supply and the tool. Excess current (amps) and a coiled extension lead will cause the cable to heat up and can result in fire.

If an extension lead is required, use an approved and compatible lead rated for this appliance. Follow all the instructions supplied with the extension lead.

†Double insulated : This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

Important: If using an extension lead, follow the instructions that came with your lead regarding maximum load while cable is wound. If in doubt, ensure that the entire cable is unwound. Using a coiled extension lead will generate heat which could melt the lead and cause a fire.

4. UNPACKING AND CHECKING



4.1 PACKAGING

Carefully remove the product from the packaging and examine it for any sign of damage. Check contents


against the parts shown in Fig A. If any part is damaged or missing, please contact the Draper Help Line (see back page). Do not attempt to use the product!

The packaging material should be retained during the warranty period, in case the product needs to be returned for repair.

Warning!

- Some of the packaging materials may be harmful to children. Do not leave any of these materials in reach of children.
- If any of the packaging is to be thrown away, make sure they are disposed of correctly, according to local regulations.


5. IDENTIFICATION – FIG.A

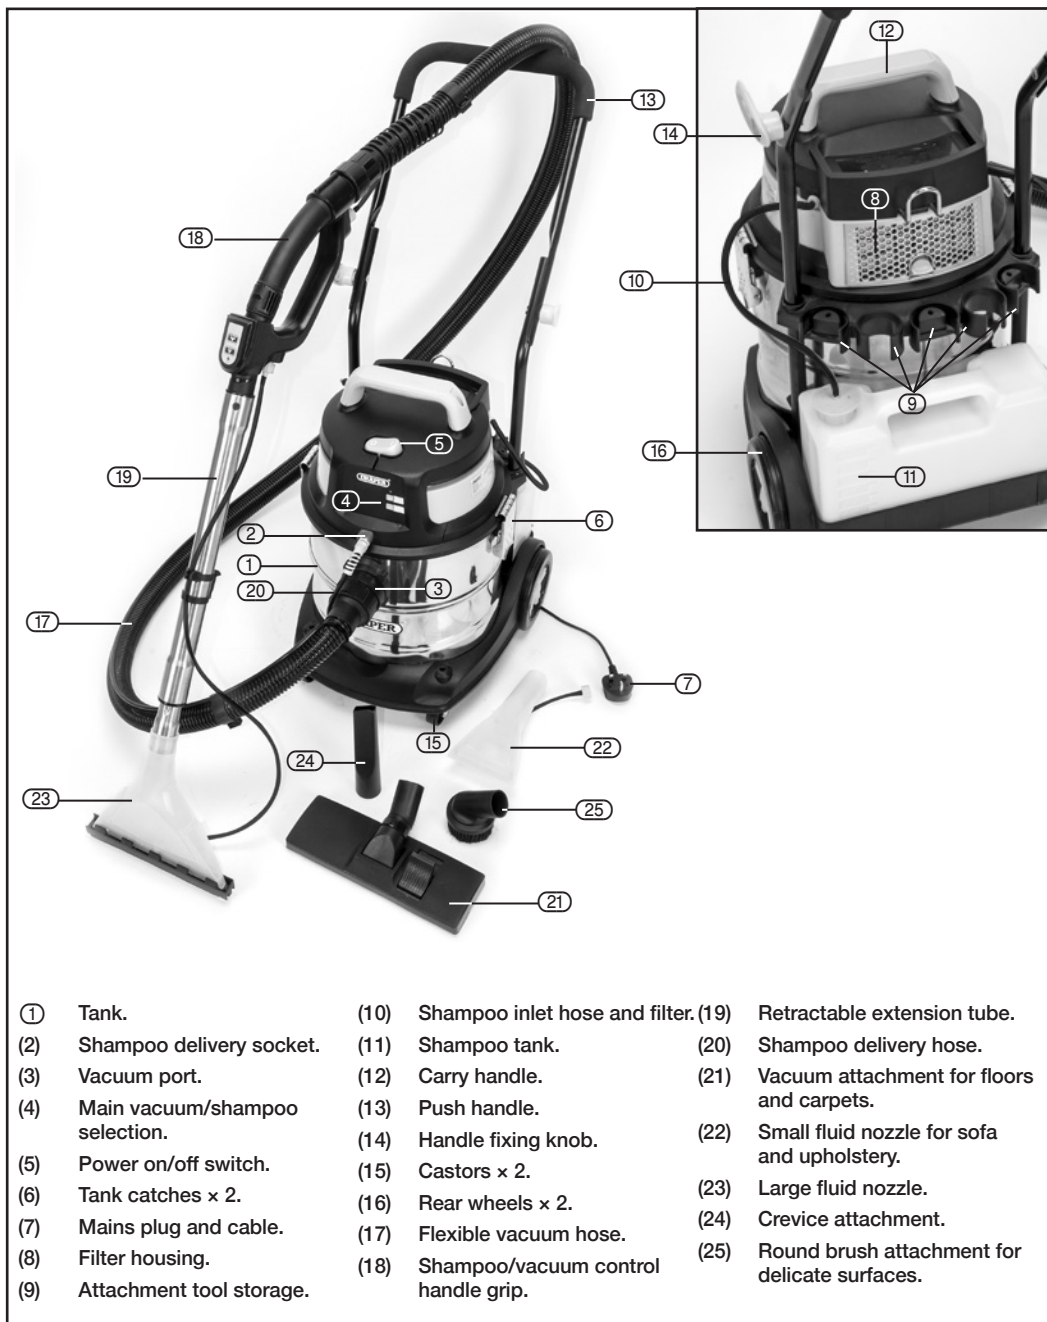

- | | | |
|------------------------------------|--|--|
| ① Tank. | (10) Shampoo inlet hose and filter. | (19) Retractable extension tube. |
| (2) Shampoo delivery socket. | (11) Shampoo tank. | (20) Shampoo delivery hose. |
| (3) Vacuum port. | (12) Carry handle. | (21) Vacuum attachment for floors and carpets. |
| (4) Main vacuum/shampoo selection. | (13) Push handle. | (22) Small fluid nozzle for sofa and upholstery. |
| (5) Power on/off switch. | (14) Handle fixing knob. | (23) Large fluid nozzle. |
| (6) Tank catches x 2. | (15) Castors x 2. | (24) Crevice attachment. |
| (7) Mains plug and cable. | (16) Rear wheels x 2. | (25) Round brush attachment for delicate surfaces. |
| (8) Filter housing. | (17) Flexible vacuum hose. | |
| (9) Attachment tool storage. | (18) Shampoo/vacuum control handle grip. | |

FIG.A

Note: For details of our full range of accessories and consumables, please visit drapertools.com

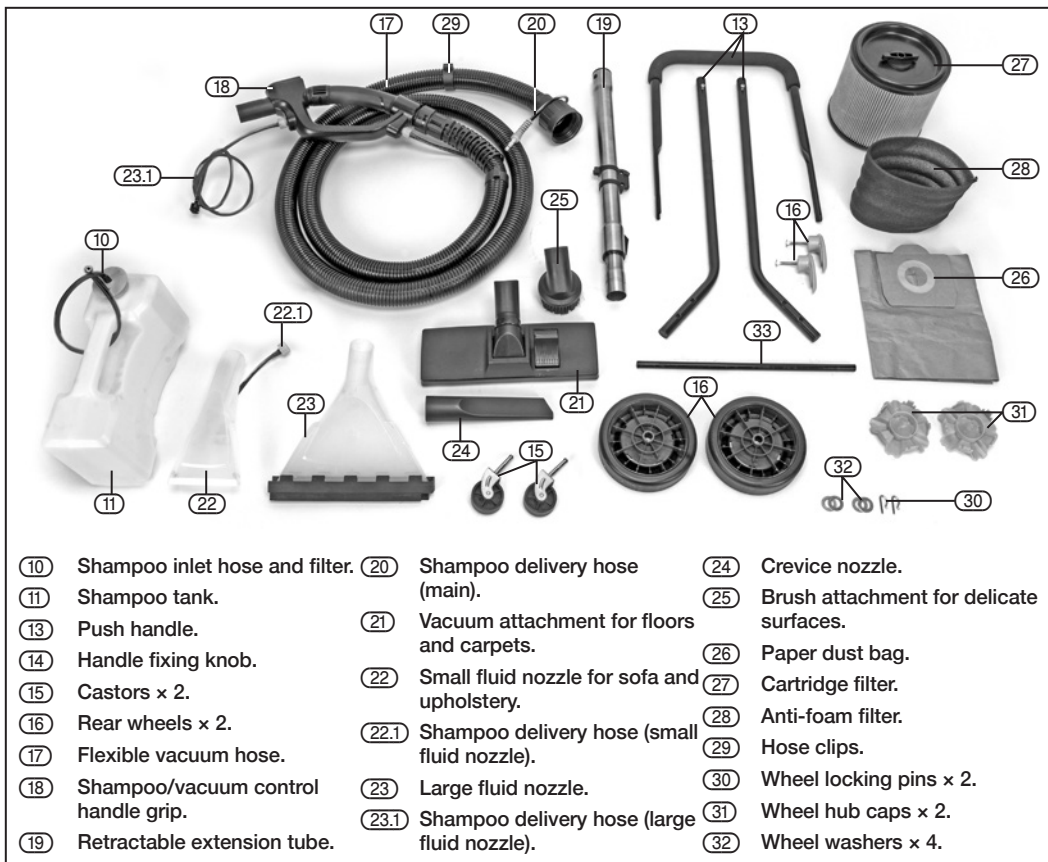

6. INITIAL MACHINE ASSEMBLY

GB

6.1 FITTING THE PUSH HANDLE – FIGS. 1 - 2

Note: The procedure for attaching the push handle to the machine must be performed before the fitting of the 2 rear wheels.

- Assemble the main hand grip part of the push handle (13.1) with the two uprights as (13.2) shown.

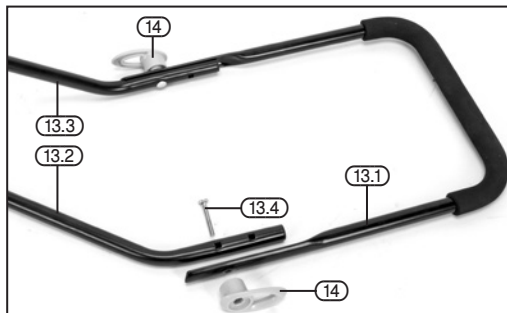


FIG. 1

- Making sure it is the correct way around (see Fig. A), slide the completed handle assembly through the holes in the tool storage section at the rear of the tank (9) and then further down into the slots located in the base of the vacuum cleaner (1.1), pressing down firmly until it snap-fits into place.

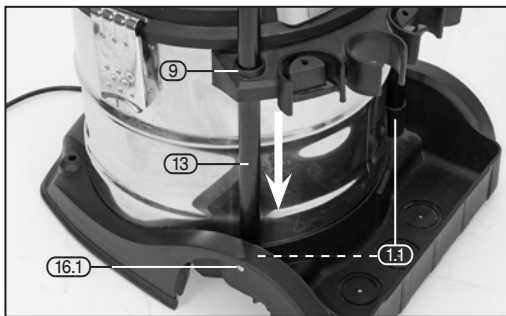


FIG. 2

- To secure on each side, tighten the supplied screw through the hole situated inside the rear wheel housing (16.1) and on through into the hole in the tubular frame of the handle (13).

6.2 FITTING THE REAR WHEELS

- FIG. 3

- Using one end of the wheel axle (33), pass one of the 2 wheel locking pins (30) through the hole at the end of the axle. Assemble making sure that it is the correct way around as shown.
- Pass the opposite end of the axle (33) through the open end of the moulded bracket situated inside the wheel housing (16.2), and out through to the other side of the machine.
- Repeat assembly on the opposite side. Snap-fit the 2 wheel hub caps (31) in place to complete the rear wheel assembly.

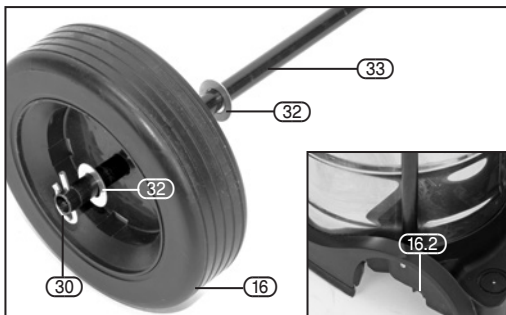


FIG. 3

6.3 FITTING THE CASTORS - FIG. 4

- Snap-fit the 2 castors (15) into the holes located on the machine base to complete the assembly.

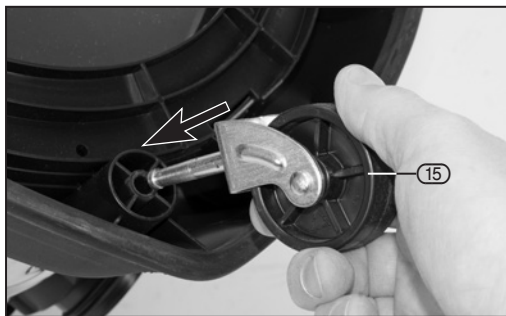


FIG. 4

7. VACUUMING DRY DUST AND DIRT

GB

7.1 CHANGING SETUP FROM WET TO DRY VACUUMING - FIGS. 5 - 6

Empty the tank and dispose of any liquid which may have been picked up previously.

Remove the anti-foam filter (28) (if fitted) and fit cartridge filter (27).

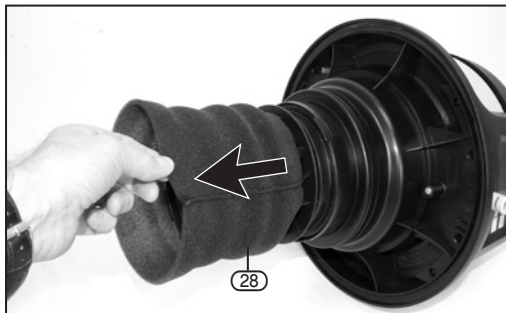


FIG. 5

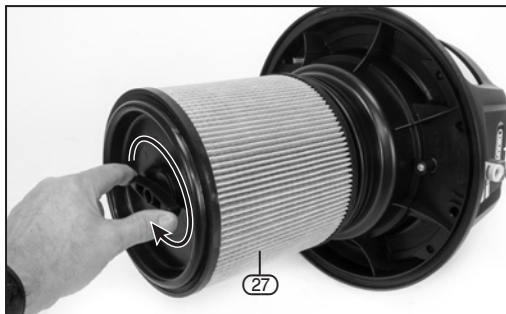


FIG. 6

Note: The cleaner comes complete with a cleanable cartridge filter (27). The cartridge filter should be cleaned using a soft brush at regular intervals. This will

ensure a longer service life and higher suction power. If the cartridge filter is not used when vacuuming dry dust and dirt the motor will be damaged.

7.2 ATTACHING THE PAPER DUST BAG – FIG. 7

When using the paper dust bag (26), dirt can be removed more hygienically and the life of the cartridge filter will be prolonged.

The paper dust bag NEVER replaces the cartridge filter but, the filter cartridge can be used without the paper dust bag.

Note: As suction power decreases, replace the paper dust bag with a new one.

Place housing on top and secure using the two tank catches (6).

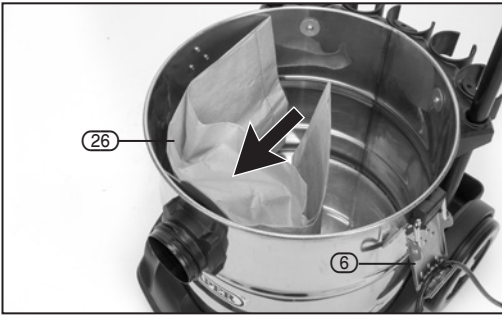


FIG. 7

7.3 CONNECTING ATTACHMENTS – FIGS. 8 - 9

Insert the head of flexible vacuum hose (17) into the shampoo/vacuum control handle grip (18), and twist to lock in place.

The grip provides a suction power regulating device (18.1). To obtain full suction power the regulator should be closed.

The grip also incorporates a remote on/off control (18.2) to operate the machine for shampoo/vacuuming operations.

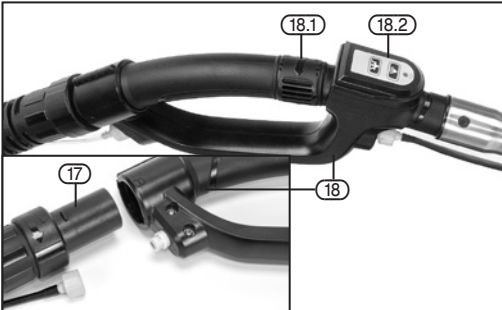


FIG. 8

The vacuum attachment for floors and carpets (21) can be used on hard floors - parquet, cork, vinyl, ceramic, etc. Any of the other attachments may be used depending upon the specific application. They are attached with a tight push fit.



FIG. 9

7.4 SWITCHING ON – FIGS. 10 – 11

Connect the vacuum cleaner to the power supply and switch the vacuum cleaner 'on' by pushing the power on/off switch (5).



FIG. 10

- Use the machine in vacuum only mode by pressing the button identified by the symbol below situated on the front panel of the machine (4.1).

Note: After selecting 'on' from the main switch, vacuum cleaning mode can be also selected from the button (18.1) located on the remote control handle grip.



Vacuum cleaning selection.

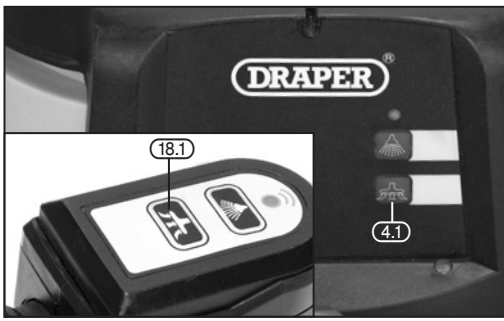


FIG. 11

Attention: EXPLOSION AND FIRE HAZARD! Never vacuum asbestos, inflammable fluids, such as petrol, oil, solvents, etc. Do not work near inflammable fluids or gas. Never vacuum fluids or material hotter than 60°C, such as burning cigarettes, ashes, glowing coals, etc.

If cable becomes damaged replace immediately.

Always keep the filter cartridge clean; for maximum performance.

8. VACUUMING FLUIDS (GB)

8.1 EMPTY TANK

If fitted, remove the paper dust bag and empty the tank to dispose of any dirt/dust which may have been picked up previously. If in place, the cartridge filter must now be removed by turning the fixing knob anti-clockwise and sliding off the motor head.

8.2 FITTING THE ANTI-FOAM FILTER – FIG. 12

Slide the filter (28) over the float cage.

NEVER VACUUM DRY DUST AND DIRT WITH THIS FILTER FITTED AS IT WILL PROVIDE LITTLE OR NO PROTECTION RESULTING IN MOTOR DAMAGE

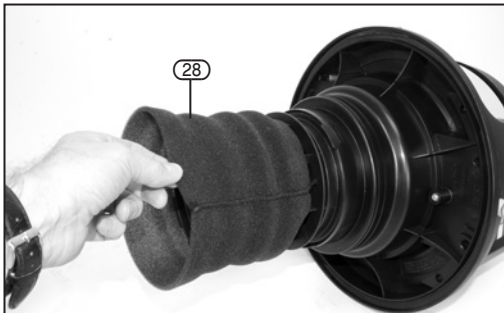


FIG. 12

Note: When the fluids have reached the highest permissible level in the tank, the float regulator will cover the motor filter causing the motor to work

harder, it will become noisier, at this point turn off and empty the tank.

8.3 FITTING THE LARGE FLUID NOZZLE– FIG. 13

Fit the large fluid nozzle (23) to the retractable extension tube (19).

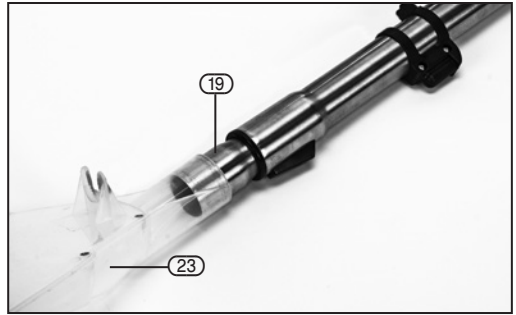


FIG. 13

8.4 SWITCH ON

Connect the vacuum cleaner to the power supply and switch the vacuum cleaner 'on' by pushing the power 'on/off' switch (5).

- Use the machine in vacuum only mode by pressing the button identified by the symbol below situated on the front panel of the machine (4.1).



Vacuum cleaning selection .

Note: After selecting 'on' from the main switch, vacuum cleaning mode can be also selected using the remote control located on the shampoo/vacuum control handle grip.

8.5 WATER ON LARGE AREAS – FIG. 14

Note: The large fluid nozzle (23) should be used on floors and other flat surface areas where the water to be picked up has dispersed over a large area but is only shallow.



FIG. 14

The crevice nozzle attachment (24) should be used when the water level is too high to use the large fluid nozzle.

Note: To ensure the air flow is adequate we recommend that the end of the nozzle is not totally immersed.

9. INJECTION/EXTRACTION SHAMPOO (GB)

9.1 ATTACH THE SHAMPOO DELIVERY HOSE- FIGS. 15- 16

- Fix the shampoo delivery hose (20) to the vacuum hose (17) using the clips (29) supplied.
- Fix the large plug end of the shampoo delivery hose (20.1) into the shampoo delivery socket (2) located on the front of the motor housing.
- Fix the other end of the shampoo delivery hose with the screw fitting (20.2) onto the shampoo/ vacuum control handle grip.

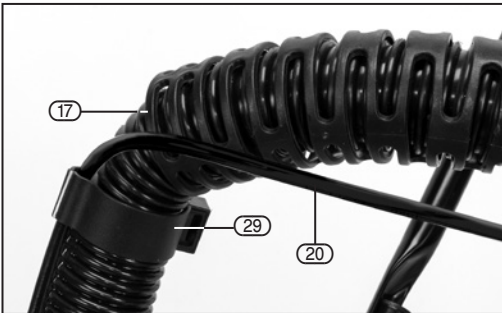


FIG. 15

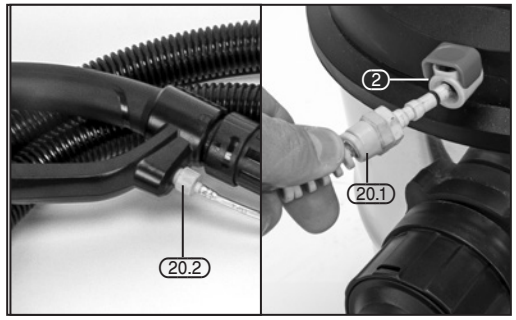


FIG. 16

9.2 FILL THE SHAMPOO TANK – FIG. 17

- Fill the shampoo tank (11) with as much correctly diluted anti-foam shampoo (Draper Stock No.28801) as required. Always follow the shampoo manufacturer's direction ratios. The shampoo tank has a capacity of approximately 4 litres.

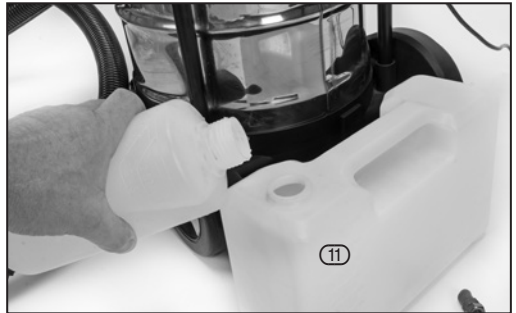


FIG. 17

- Fit the shampoo supply tank into its housing on the base of the machine, situated to the rear.

9.3 CONNECTING SHAMPOO INLET HOSE AND FILTER – FIGS. 18 – 19

- Place the sponge filter end of the shampoo inlet hose (10) into the shampoo tank (11) and push fit the cap (10.1) onto the shampoo tank to close.
- Connect the plastic plug on the other end of the shampoo inlet hose directly into the shampoo delivery inlet socket (10.2) on the side of the motor housing.

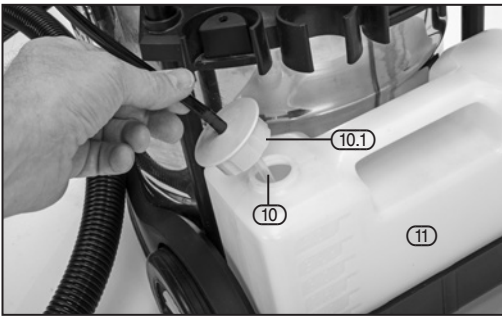


FIG. 18



FIG. 19

9.4 ATTACHING THE LARGE FLUID NOZZLE – FIGS. 20 – 21

- Set up the vacuum cleaner for vacuuming fluids as section 10.
- If not already fitted, follow the procedure listed above in 9.1 for attaching the main shampoo delivery hose.



FIG. 20

- Attach the shampoo delivery hose (23.1) to the large fluid nozzle (23) by slotting the spray end (23.2) into the plastic bracket (23.3) located on the underside of the nozzle.
- Connect the other screw fitting end of large fluid delivery hose (23.4) to the shampoo/vacuum control handle grip.

Note: Follow the same procedure above when using the shampoo upholstery attachment.

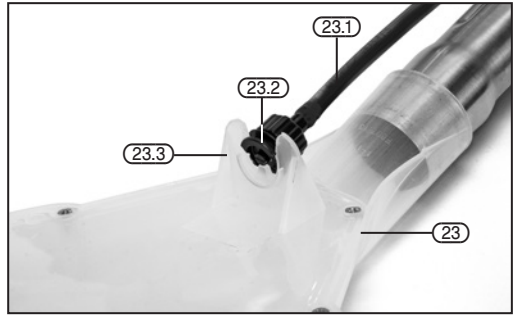


FIG. 21

9.5 ATTACHING THE SMALL FLUID NOZZLE – FIG. 22

The small fluid nozzle (22) connects directly onto the shampoo/vacuum control handle grip (18) without need for the retractable extension tube.

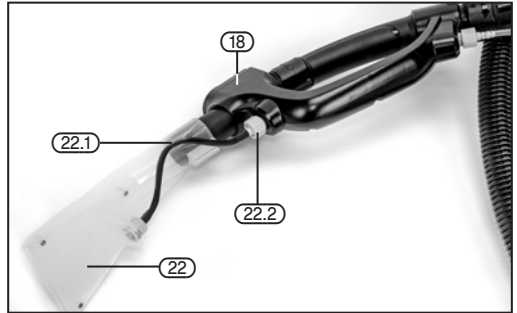


FIG. 22

- Set up the vacuum cleaner for vacuuming fluids as section 8.
- If not already fitted, follow the procedure listed in chapter 11.1 for attaching the main shampoo delivery hose (20) to the flexible vacuum hose (17) plus connections to vacuum cleaner and shampoo/vacuum control handle grip (18).

Note: If the machine is or has been used in conjunction with the large fluid nozzle (23) and retractable extension tube (19), remove these and also the large fluid shampoo delivery hose (23.1) where it joins the shampoo/vacuum control handle grip by unscrewing and removing the fitting where it joins onto the handle grip.

- Connect up the small fluid shampoo delivery hose (22.1) onto the shampoo/vacuum control handle grip (18) by screwing on the attached fitting (22.2), as shown in fig. 22.

9.6 SWITCH ON – FIGS. – 23 – 24

Connect the vacuum cleaner to the power supply and switch the vacuum cleaner 'on' by pushing the power on/off switch (5).

- Use the machine in shampoo mode by pressing the button identified by the symbol below; this can be achieved by pressing the button located on the front of the motor housing (4.2), or preferably by using the shampoo (18.2) and vacuum button (18.1) located on the remote control handle grip (18), making for easier operation when frequently switching between shampoo and vacuum modes.



Vacuum cleaning selection.



Shampoo selection.

Note: Use rubber sleeve (23.2) for use on hard floors.



FIG. 23

Note: Always clean a small hidden piece of carpet/material that you are going to clean to check the fastness of the colour.



FIG. 24

10. MAINTENANCE



10.1 BASIC MAINTENANCE

Note: Remove the plug from the socket before

carrying out adjustment, servicing or maintenance.

Regular inspection and cleaning reduces the necessity for maintenance operations and will keep your tools in good working condition.

The motor must be correctly ventilated during the tools operation. For this reason avoid blocking the air inlets.

If the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard.

Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

- Empty tank regularly. Never leave fluids in the receptacle as these could damage the material over a period of time.
- After having picked up fluids, dry extension tubes, hose and motor parts by running the vacuum cleaner for a few minutes, **AFTER HAVING EMPTIED THE TANK.**
- Always keep spare dust bags and cartridge filters so that the vacuum cleaner is always ready for use.
- Regularly clean and wash the motor filter located inside the fluid float cage.
- Use of paper dust bags - as suction pressure decreases, replace the paper dustbag with a new one.
- Clean the cartridge filter periodically with a soft brush. This will prolong the life of the filter.

Note: The filter must be dry before re-using.

11. WARRANTY



11.1 WARRANTY

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact:

Draper Tools Limited

UK: Chandler's Ford, Eastleigh, Hampshire,
SO53 1YF. England.

EU: Oude Graaf 8, 6002 NL Weert (NL).

Telephone Sales Desk: +44 (0)23 8049 4333 or:

Product Helpline +44 (0)23 8049 4344.

A proof of purchase must be provided.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This warranty period covering parts/labour is 24 months from the date of purchase except where tools are hired out when the warranty period is 90 days from the date of purchase. This warranty does not apply to any consumable parts, any type of battery or normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs

attempted or made by any personnel other than the authorised Draper warranty repair agent.

Note: If the tool is found not to be within the terms of warranty, repairs and carriage charges will be quoted and made accordingly.

This warranty applies in lieu of any other warranty expressed or implied and variations of its terms are not authorised.

Your Draper warranty is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the warranty period.

Please note that this warranty is an additional benefit and does not affect your statutory rights.

Draper Tools Limited.

12. DISPOSAL

(GB)

12.1 DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not dispose of WEEE* as unsorted municipal waste.



* Waste Electrical & Electronic Equipment.

13. FITTING AND REPLACING THE REMOTE CONTROL HANDLE BATTERY

(GB)

1 X 23A (12V) alkaline battery required (not supplied).

1. To fit or replace the battery, push the release latch (18.3) using a cross slot screwdriver (FIG. 25).
2. Remove the cover and fit the battery – ensuring the correct +/- orientation (FIG. 26).
3. Clip the cover back on.

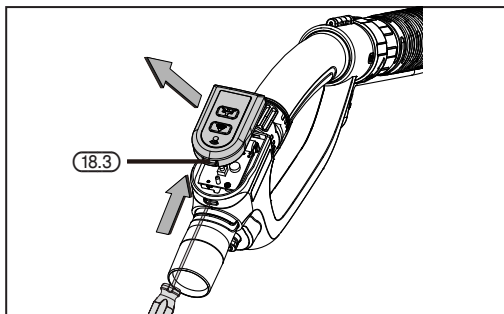


FIG. 25

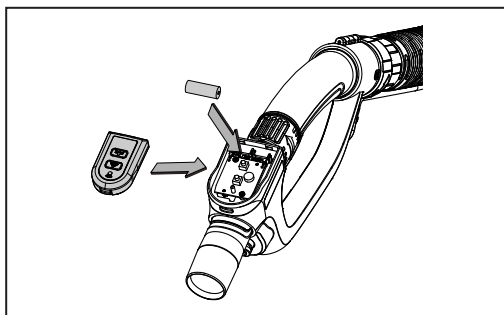


FIG. 26

Contact Details

Draper Tools

Draper Tools Limited

Hursley Road

Chandler's Ford

Eastleigh

Hampshire

SO53 1YF

UK

Website: drapertools.com

Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344

Telephone Sales Desk: +44 (0) 23 8049 4333

General Enquiries: +44 (0) 23 8026 6355

Delta International

Delta International BV

Oude Graaf 8

6002 NL

Weert

Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.